




## TENT ERECTION INSTRUCTIONS

### DIABLO 400 & 600

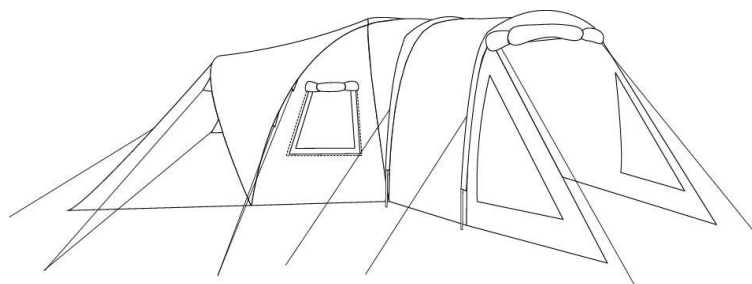

#### Inner Pitching First

- Assemble poles on ground. 7 poles: 3 longer dome poles, 2 shorter bedroom poles & 2 medium (angled) porch poles – (+ 2 steel upright poles).
- Open out inner and insert 3 longest poles diagonally (cross) through pole sleeves. **The poles are colour coded to match corresponding pole sleeve entry points.**
- Insert shorter length poles through the pole sleeve across the end bedroom areas. **The pole is colour coded to match corresponding pole sleeve entry point.**
- Locate the pole ends on one side of the dome area onto the pin-system. (A second body can be utilised to help form the dome area to avoid undue stress on the poles).
- Push poles into arch from the opposite side and locate pole ends onto corresponding pin system.
- Locate the 2 shorter bedroom poles onto the pin system and push poles into arch, one at a time, from opposite side. Insert pole ends onto corresponding pin system to form inner tent.
- The inner tent should now be relatively freestanding. (Reposition if required).
- Peg the inner tent through the metal rings at the pole bases using the pin-pegs and ensuring that the groundsheet is correctly tensioned (groundsheet inside inner tent should be flat).
- **IMPORTANT: It is best to peg the 4 corner pegging points at the ends of the bedrooms before pegging the remaining metal rings of the inner tent.**

#### Outer Flysheet

- Open the flysheet and position so that entrance/porch corresponds with inner doorway. Lay the flysheet on the ground.
- Insert the remaining 2 medium porch poles into porch pole sleeves on the outside of the flysheet. **The poles are colour coded to match corresponding pole sleeve entry point.**
- Locate the poles onto the pin system and push poles into arch, one at a time, from the opposite side. Insert pole ends onto corresponding pin system to form the porch.
- Pull the flysheet over inner tent and position the seams to correspond with the poles on the inner tent.
- Fabric ties are located on the inside of the flysheet. There is one in the top centre and others around the mid-sides. These must be attached around the pole crossover points by using a simple "bow" knot.
- 2 side-release buckles at the base of each side of the flysheet are attached to the mating half.
- Peg out the two anchor straps on the porch area the tent using the V-pegs supplied. Repeat this for the anchor straps at the corner of the bedrooms.
- The anchor straps can be adjusted as required to ensure that the flysheet remains taut in all conditions. Regulate to suit conditions.
- **Care should be taken to avoid over tension of the anchor straps as undue stress may cause damage to the flysheet fabric.**
- Peg out and hook all remaining shock-cord pegging points around the base of the flysheet.
- Peg our **ALL** guy lines using alloy pin-pegs ensuring that guy line fabric attachment points are evenly tensioned.
- The detachable porch groundsheet is fitted by means of elasticised hooks and pegging eyelets.