

Pinchart of every KMF intensifier  
pump and cutting table's connection aviation electric outlet

core number	wire number					remark
	I	II	III	IV	V	
1	2160	242	245	X1 17		public wire
2	I:0.0	302	3162	X1 18		oil pump on
3	I:0.1	342	3182	X1 20		2-hp
4						
5	I:0.2	372	3172	X1 19		oil pump off
6						
7	3030	232	222	X1 5		Emergency stop
8	3031	233	232	X1 6		Emergency stop
9						
10						

Note: 1 IV is the wire number of the present KMF model's distance control  
2 Discharge the emergency jump wire between X15 and X16 before starting

<h1>A&amp;V</h1> <p><a href="http://www.avwaterjet.com">www.avwaterjet.com</a></p>		signal sheet connected with KMF		A&V Waterjet Tech. Inc		
				Design mark	Weight	Ratio
Designed by		Date		APW-SK II - 1-3		
Checked by		Date				
				Total page	Page	