

NEC Feature Clear (SL)

Useful if the handset is not behaving predictably or a feature has been set unintentionally. (DND, Headset Mode etc)

On any NEC Telephone

- Press **Speaker**
- Dial ***9** on the Keypad
(Phone will beep and say “Cancel” on the headset)
- Press **Speaker**

If the issue persists please raise a ticket by emailing support@converj.co.uk