

VK2: How to connect an audio source to VK2-IPCamera

INTRODUCTION

This procedure will describe how to connect an Audio source [Mic or Line Level] to a VK2 IP Camera that supports audio.

Procedure

Firstly, connect Audio source to camera input connection terminals "MIC In & Gnd" [connection type varies on cameras Screw, Phono or 2.5mm Jack. Fig 1]. The camera will accept Mic or Line Level.

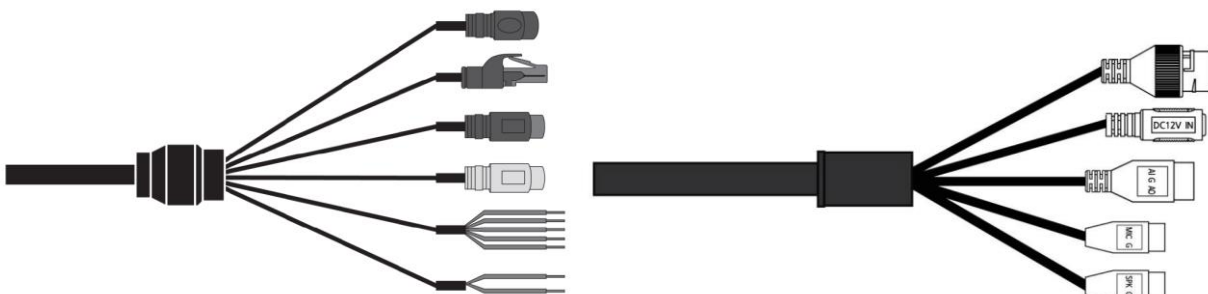 



Fig 1

Once this is done you will need to: -

- Web browse into the camera and login in as Admin
- Click on menus Audio > Basic click Enable audio [Fig 2]
- Select Compression type
- Select Audio Input type
 - Internal Amp {Mic Input}
 - External Amp {Line Level}
 - Input volume can be adjusted if required

If need more information, click on the "Help Button"  **Help Page** this will guide you though the settings.

 
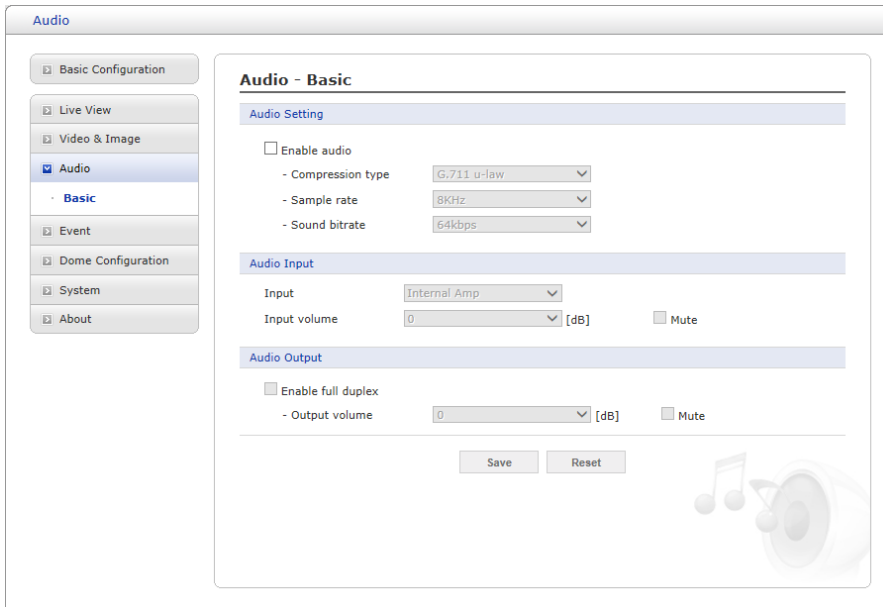 


Fig 2

Click on Save and check the audio is working via web browser “Live View” click on Audio volume to listen.

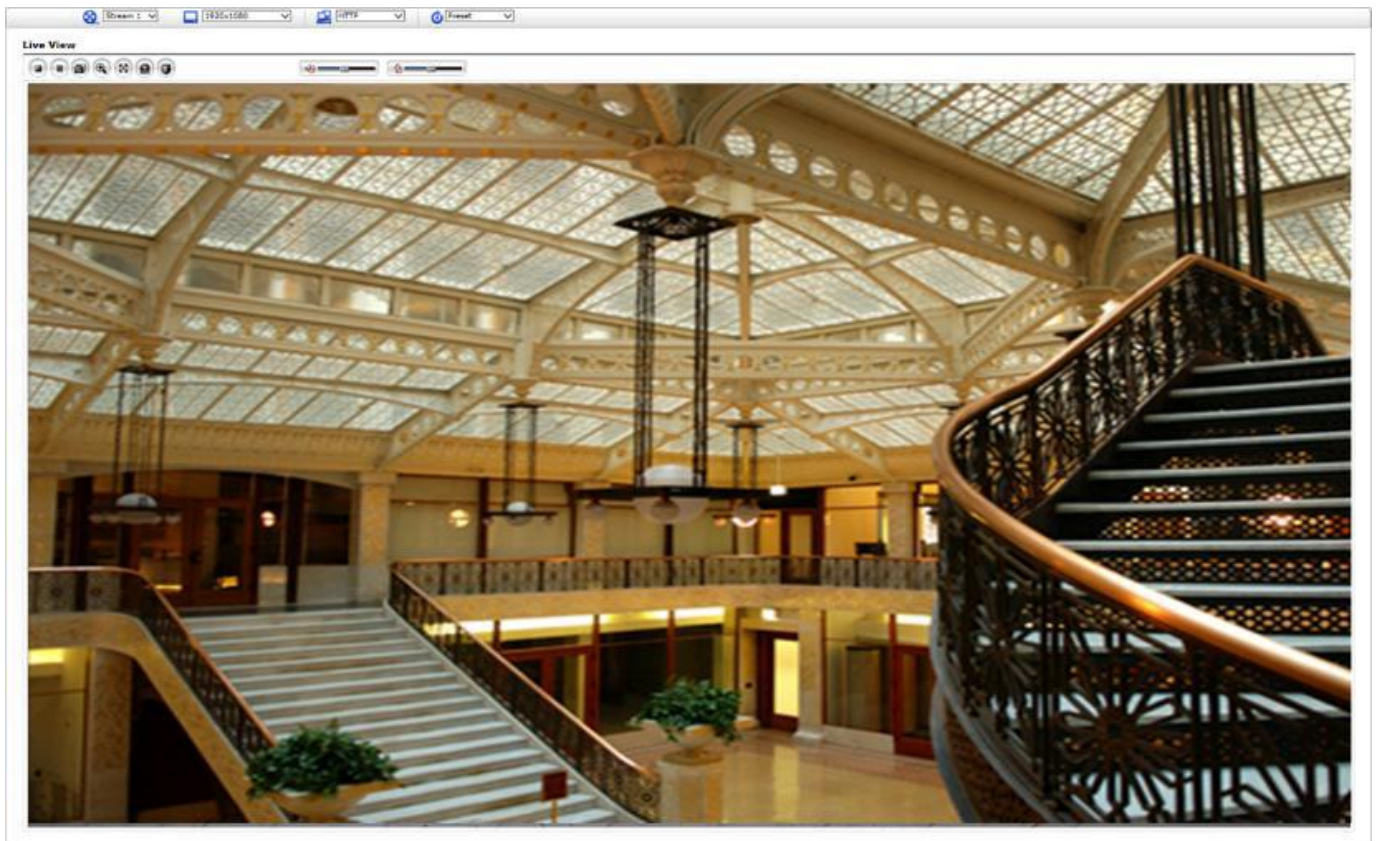

This completes the procedure.