

Immobilisation on ASYNC Message Wiring Diagram

Dart2

Device works as normal until immobilise
signal is sent from Telematics

