

# Immobilisation on ASYNC Message Wiring Diagram

Device works as normal until immobilise  
signal is sent from Telematics

