

Reset Button Alternative

Part Number(s): G1, G1D, G3

If you are installing a G1/G1D/G3 and received a wired keypad that does not have a “RESET” button, pressing the “STOP” & “UNLOCK” button simultaneously can be used as an alternative.

G1 can be reset by pressing “STOP” and “UNLOCK” for 10 seconds.

G1D/G3 can be reset by pressing “STOP” and “UNLOCK” for 15 seconds.

