

SAFETY WARNING

Before use please read carefully and use in accordance with these safety instructions.

Before commencing any electrical work ensure the supply is switched OFF at the mains. Either by switching off the consumer unit or by removing the appropriate fuse. This product should be installed in accordance with the relevant sections of the building regulations code and in accordance with the latest edition of IEE regulations (BS 7671).

If the unit is to be used as a replacement for an existing product, remove the existing unit from its location and disconnect the wiring. Connect the wires as shown in diagram. Ensure terminals are properly tightened and ensure no bare wires are visible. When pushing back into the backbox ensure no wires are trapped. Read the instructions carefully before starting the installation process and keep them safe for future reference.

IF IN ANY DOUBT, PLEASE CONTACT A QUALIFIED ELECTRICIAN.

SWITCHES MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN

SPECIFICATION

WARNING: DO NOT EXCEED THE LOAD RATING AS SHOWN ON THE BACK OF THE PRODUCT

Touch and Touch & Remote On/Off Switches: LED/Halogen/Incandescent:

1 Gang	3 - 1500watts
2 Gang	3 - 1500watts (750 watts per gang)
3 Gang	3 - 1500watts (500 watts per gang)

1 Gang Touch and Touch & Remote Dimmer Switches:

LED*/Halogen/Incandescent: 3 - 50W

2 Gang Touch & Remote Dimmer Switches:

LED*/Halogen/Incandescent: 3 - 100 watts (50 watts per gang)

 
Voltage:	110~240V ~ 50/60Hz
Working Temperature:	0°C~40°C Relative
Humidity:	10% - 93%
Energy Consumption:	<0.02W
Measurement:	86x86mm
Backbox depth:	35mm
Life:	100,000 operations (relay life)
Remote usage distance:	>10M
Remote battery:	27A 12vDC
Battery life:	1 year (dependent on usage)

Note: Our dimmer switches are not suitable for use with fluorescent loads, including energy saving lamps and certain non dimming LED bulbs.

*Not all LED bulbs are compatible and depends on brand, please call for more information.

INSTALLATION


1. Power Off: Turn off the mains power before starting any installation.



2. Remove the glass panel: Using a flat screwdriver align to aperture on the bottom of cover and twist and lift to unclip. Be careful not to damage the glass.

3. Wiring: Wire as described as per the diagram. Push wires firmly into terminals and tighten terminal screws to ensure wires are held securely. No bare wires should protrude from the terminals. Ensure correct wires are connected to the correct terminals, if incorrectly wired, this could damage the switch.

4. Fix screws: Screw to attach switch to backbox

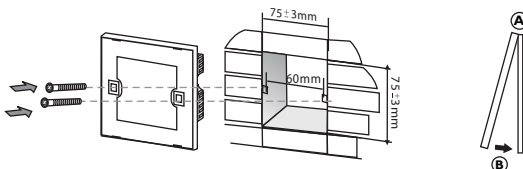

5. Re-attach the glass Surround:

Align the glass panel over the switch (A) and firmly push (B) to click into place.


6. Power on: Ensure the glass is attached before turning the power is on, wait 2 minutes for the switch to power up, then touch the panel to turn on the light.

7. For 2 way & intermediate models:

You will need to pair the gangs, Press and hold a gang on the master wired switch (i) for 5 seconds until you hear a beep. Within 60 seconds press the corresponding gang on the slave switch you want to pair with the master switch - the switch will flash or beep to confirm pairing is successful. Repeat the process for all gangs you want pair.


WIRING DIAGRAMS

1 WAY WIRING

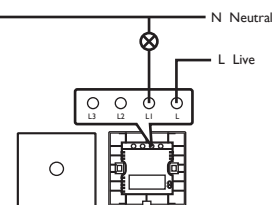


1 GANG

2 WAY WIRING

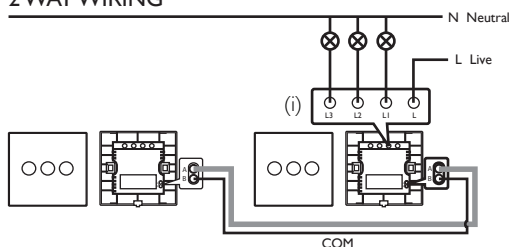

3 GANG

INTERMEDIATE WIRING

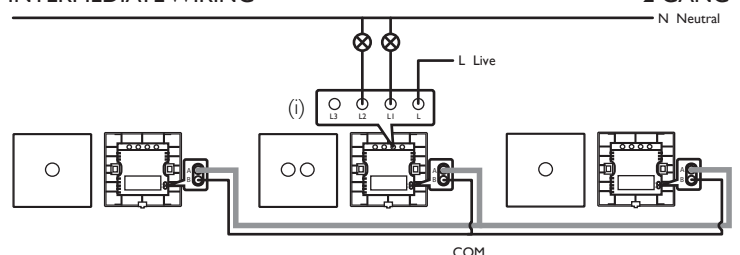

2 GANG