



### Refill Instructions for Design e-motion Pencil:



1. Remove the remaining piece of lead by turning the cap (4) clockwise until a click is heard. **It is very important to wait for the click.** If there is a small piece of lead left, this click should eject the remaining lead.
2. Retract the mechanism located inside the barrel (2) by turning the cap (4) counterclockwise 3 or 4 times.
3. Insert **1** new Faber-Castell **1.4mm** lead (5) into the front piece (1) until the lead is held firmly in place. You may need to push with pressure until held.
4. Continue retracting the lead by turning the cap (4) counterclockwise until the lead is at a comfortable writing length to begin writing.
5. To advance the lead, turn the cap (4) clockwise and adjust the length if needed.
6. To retract the lead, turn the cap (4) counterclockwise.

**Refills** Eraser: #188345  
Lead: **1.4mm** (B) Only #121497

**Note** The mechanism located inside the barrel (2) will hold 1 piece of lead at a time. Store up to 6 spare leads in the side chambers located inside the barrel (2). You will need to remove the front piece (1) from the barrel (2) to store the leads inside by turning the front piece (1) counterclockwise.

The e-motion Pencil comes equipped with **1.4mm** (B) lead. At this time, the **1.4mm** lead is only available in degree (B) lead hardness.