



GRAF VON FABER-CASTELL

Refill Instructions for Graf von Faber-Castell Limited Edition Elemento Fountain Pen:

FOUNTAIN PEN INK

It is necessary to use Faber-Castell Fountain Inks exclusively with Faber-Castell Fountain Pens for best performance and to prevent damage to the feed. Our inks are specially formulated and designed specifically for our pens. If using unsuitable ink by another manufacturer, the instrument will be adversely affected. In these cases, replacement part charges and/or repair fees will apply. For best results and to prevent clogging, use fresh ink when refilling the pen.

CARE

Nibs will adjust to your handwriting as you write with the pen. It is not recommended to allow others to write with your fountain pen. Do not press down hard as this may result in skipping and ink flow problems. The ink flow begins as the nib touches and glides across the paper. If a pen has not been used for an extended period of time and you are experiencing ink flow problems, you can flush the nib with water. Flushing a nib is accomplished by following the converter refill instructions, only using water as opposed to ink. Never use alcohol.

AIR TRAVEL

Changes in air pressure during a flight can cause a fountain pen to leak. It is therefore recommended when not in use, that you keep the pen vertical with the nib uppermost when traveling by air.



1. Remove the cap (1) from the barrel (3) by pulling it off gently.
2. Remove the nib/front piece (2) from the barrel (3) by twisting the end piece (4) of the barrel (3) counterclockwise.
3. To fill the pen with ink, choose the option below that best suits your preference.

A: Option 1

CONVERTER (5) (All Elemento Fountain Pens come equipped with a converter)

1. Make sure the converter (5) is in the filling position by twisting the back end counterclockwise.
2. Dip the nib/front piece (2) down into the Faber-Castell ink bottle (7) and turn the top of the converter (5). This action will pull the ink up into the converter (5). Wipe excess ink from the nib/front piece (2) with a soft, clean paper towel or cloth.

B: Option 2

CARTRIDGE (6)

1. Pull the converter (4) firmly to remove it from the nib/front piece (2).
2. Insert a Faber-Castell ink cartridge (6) into the front piece (2). Push the cartridge (6) in until you hear a slight "pop." This sound means the cartridge (6) has been pierced and the ink will flow into the ink feed of the nib/front piece (2).
4. Return the nib/front piece (2) to the barrel (3) making sure to line up the parts.
5. Once the nib/front piece (2) is aligned with the barrel (3), twist the end piece (4) of the barrel (3) clockwise to secure the nib/front piece (2) and begin writing.
6. When not in use, return the cap (1) to the barrel (3) by pushing it on to the barrel (3) gently until you hear it click closed. Store horizontally or with the nib/front piece (2) in an upright position.

Refills



Ink Bottle: #141011 Burned Orange, #141005 Garnet Red, #141014 Electric Pink, #141006 Violet Blue, #141007 Midnight Blue, #141010 Turquoise, #141008 Deep Sea Green, #141004 Moss Green, #141003 Stone Grey, #141002 Hazelnut Brown, #141000 Carbon Black (75ml)

Ink Cartridge: #141111 Burned Orange, #141105 Garnet Red, #141114 Electric Pink, #141106 Violet Blue, #141107 Midnight Blue, #141110 Turquoise, #141108 Deep Sea Green, #141104 Moss Green, #141103 Stone Grey, #141102 Hazelnut Brown, #141100 Carbon Black (0.86ml x 6)

Converter: #148685

Faber-Castell USA, Inc. • 9450 Allen Drive, Suite B • Cleveland, OH 44125

800-311-8684 • penrepair@fabercastell.com

Monday – Friday 9 a.m. – 5 p.m. EST