




Refill Instructions for Design e-motion Rollerball Pen:

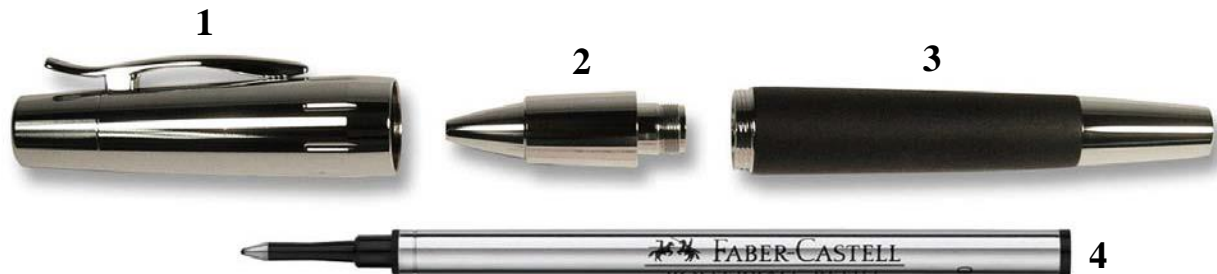

1. Remove the cap (1) from the barrel (3) by turning the barrel (3) counterclockwise.
2. Remove the front piece (2) by turning the barrel (3) counterclockwise.
3. Remove the used refill (4) from the barrel (3).
4. Insert a new Faber-Castell Rollerball Refill (4) into the barrel (3).
5. Return the front piece (2) to the barrel (3) by turning the barrel (3) clockwise and begin writing.
6. When not in use, return the cap (1) to the barrel (3) by turning the barrel (3) clockwise.

Refills Rollerball: #148712 Black, #148797 Black 2pk on Blister Card, #148713 Blue
Fineliner: #148735 Black, #148736 Blue

Note The e-motion Rollerball Pen comes equipped with a black rollerball refill.

Due to the conical shape of the e-motion Rollerball Pen, it is not designed to post and will not do so 100% of the time.