



Refill Instructions for Design Twist Pocket Ballpoint Pen:



1. Remove the front piece (1) from the cap (2) by turning the cap (2) counterclockwise.
2. Remove the empty ballpoint refill (3) from the cap (2).
3. Insert new Faber-Castell D1 Ballpoint Refill (3) into the front piece (1).
4. Return the cap (2) to the front piece and turn cap (2) clockwise to fasten.
5. Twist the cap (2) clockwise to advance the ballpoint (3) and begin writing.
7. To retract the ballpoint (3) twist the cap (2) counterclockwise.

Refills Ballpoint: D1 #148760 Black, #148761 Blue

Note The Twist Pocket Ballpoint Pen comes equipped with a D1 black ballpoint refill.