



### Refill Instructions for Design e-motion Rollerball Pen:



1. Remove the cap (1) from the barrel (3) by turning the barrel (3) counterclockwise.
2. Remove the front piece (2) by turning the barrel (3) counterclockwise.
3. Remove the used refill (4) from the barrel (3).
4. Insert a new Faber-Castell Rollerball Refill (4) into the barrel (3).
5. Return the front piece (2) to the barrel (3) by turning the barrel (3) clockwise and begin writing.
6. When not in use, return the cap (1) to the barrel (3) by turning the barrel (3) clockwise.

**Refills**     Rollerball: #148783 Black  
                  #148784 Blue

**Note**         The e-motion Rollerball Pen comes equipped with a black rollerball refill.

Due to the conical shape of the e-motion Rollerball Pen, it is not designed to post and will not do so 100% of the time.