



## Mains Connection

Depending on the kitchen purchased your kitchen will have 1,2, 3 or 4 x 13amp plugs fitted to the individual appliances (with the exception of the Fov kitchen) . Please consult a qualified electrician regarding the installation of the sockets to feed the kitchen and refer to the first fix guide regarding the electrical loadings and positions. All installations and repairs must be carried out by a qualified trades person.

## Water Supply and Drainage

Your kitchen is supplied with a waste kit and tap (except the contract range) please ensure these are fitted and secured correctly by a competent trades person to ensure a watertight installation.

## Hotplates

Before the first use of rings of the protective coating on the plate surface must be corroborated. For this purpose, first the rear hob must be switched on at the highest level without a pot at least 4 minutes (the front plate must remain off). After this time, wait at least 5 minutes. Then the front hotplate switch on to the highest level without a pot at least 4 minutes (the rear plate remains off). Thereafter, the operation of burners is generally prohibited without pot.

Use only vessels with a flat bottom and a plate for each appropriate diameter.

## Timer - if fitted

As an additional safety device for safe cut-off of rings the mini kitchen has a mechanical timer with a max. running time of 30 minutes. After the set time 0 to 30 minutes,

the power is interrupted to the burners. If longer cooking is require the timer must be re-set again to the maximum adjustable 30 minutes.



The hotplates are controlled according to a switch with seven switch positions (6 circuit stages and a 0-position). On the knobs you will find the numbers 0-1-2-3.

<b>0</b>	<b>=</b>	<b>Off</b>
<b>1</b>	<b>=</b>	<b>Low</b>
<b>2</b>	<b>=</b>	<b>Medium</b>
<b>3</b>	<b>=</b>	<b>High</b>

The dots indicate three additional intermediate/half stages. These intermediates can be selected if the higher level is too high or the lower level of heat output is too small.

At 0-position the hob is switched off. The indicator light is lit while at least one of the two rings is in operation. The cooking plates can still be hot (residual heat) despite extinguished pilot light.

O) = for rear hob

o) = switch for the front hob



For parboiling set the timer to the desired cooking time and then turn the switch at level 3 Then switch according to need one or several levels lower. In almost all cooking and frying operations the hotplates can be turned off 5-10 minutes prior due to the residual heat of the hotplate. So switch to "0" and select the cooking time with the timer correspondingly shorter. If the cooking time exceeds the maximum adjustable 30 minutes, the timer this must be reset.