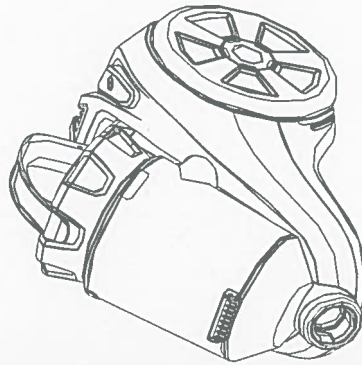


# HOUSEHOLD CYCLONE VACUUM CLEANER

## INSTRUCTION MANUAL

Model : RCC-1115N



The ecodesign requirements of the vacuum cleaner are tested and checked according to EU 666/2013, EU 665/2013, and EN 60312-1:2013.



• Read the instruction manual carefully before using this vacuum cleaner and please keep safety.

• To protect environment, Respect local regulations; hand in unwanted electrical equipment to appropriate waste disposal centre

## INTRODUCTION

You have chosen a Daewoo Vacuum Cleaner. Daewoo offers a variety of quality product that would make your life more comfortable. The operation of this vacuum cleaner is easy even so.

Please read the user manual very carefully before starting to use the appliance and keep safely.

Thank you.

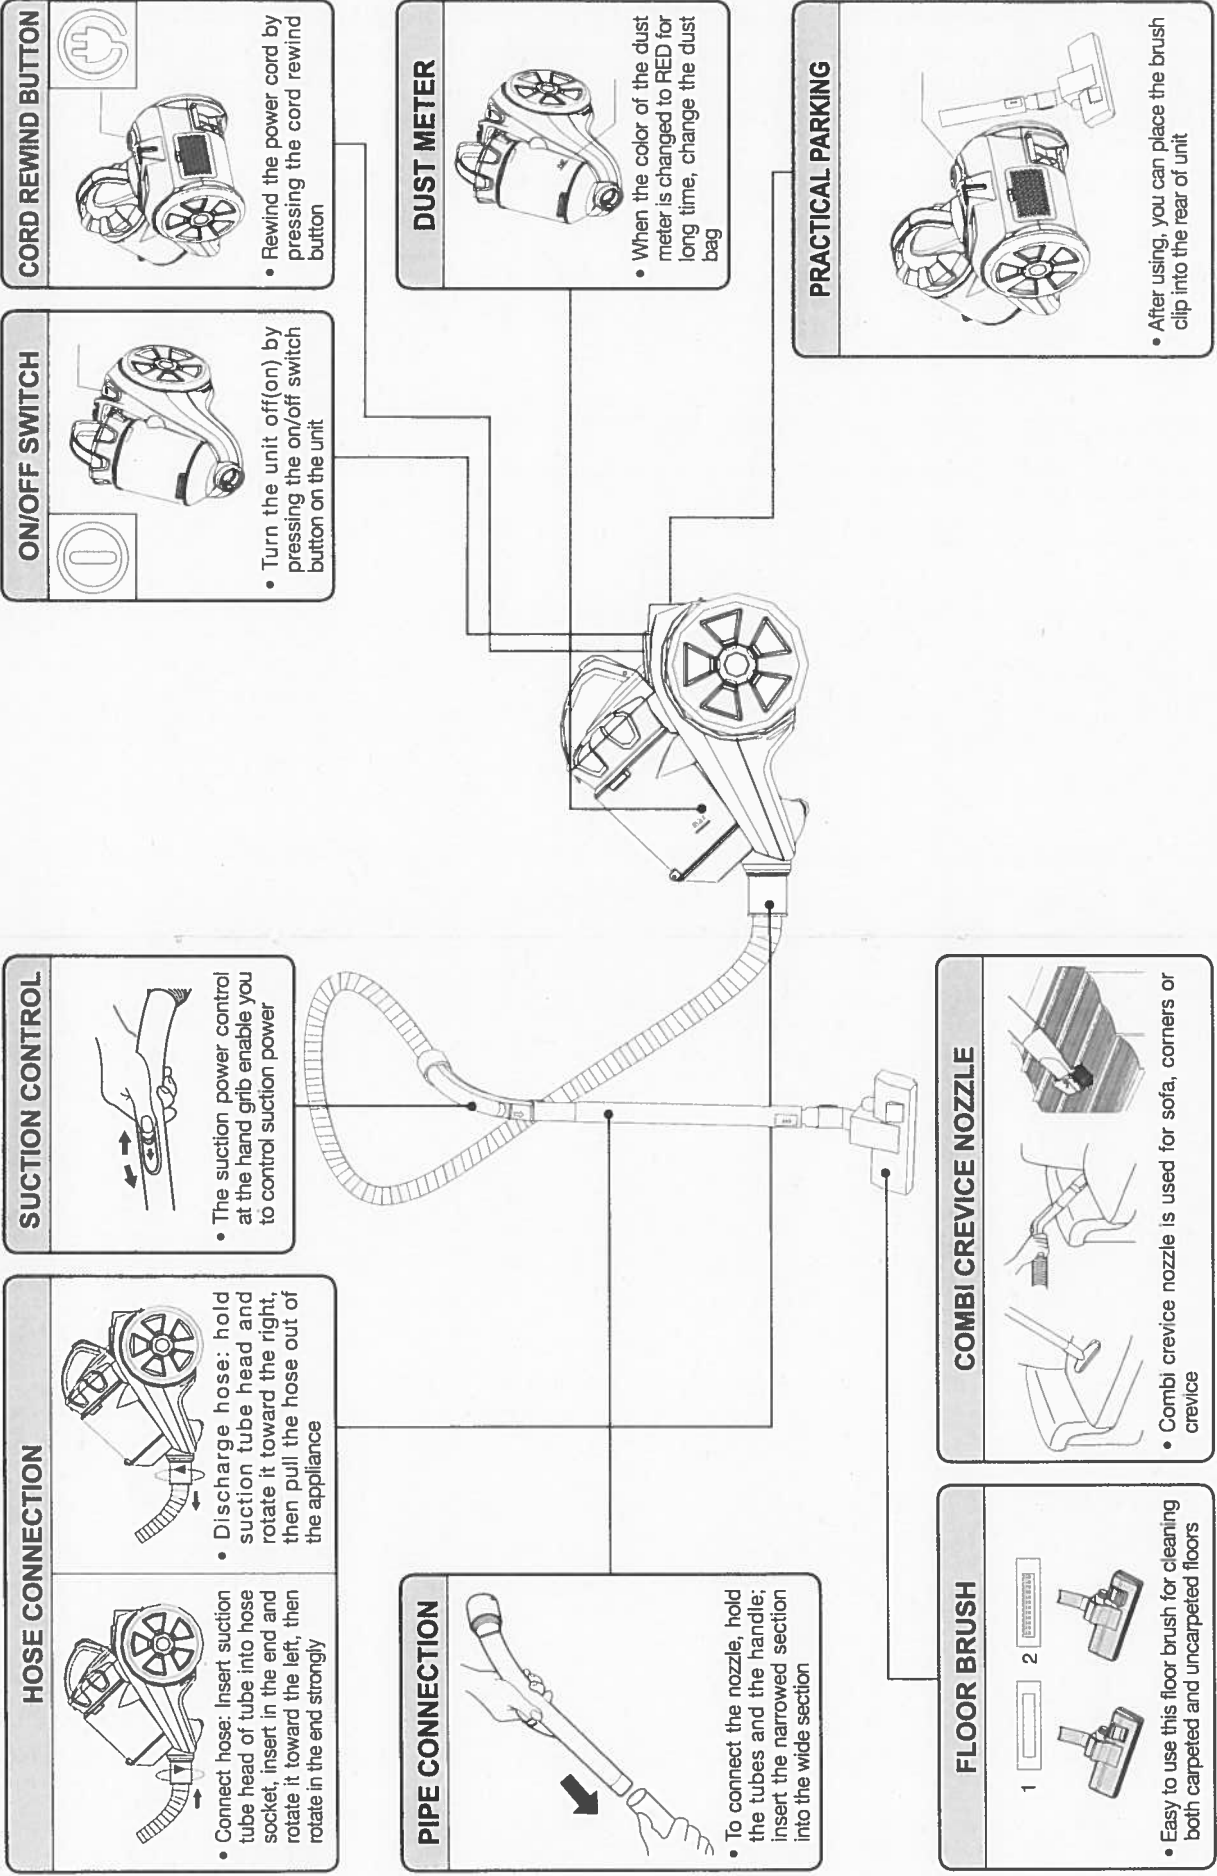
## SPECIFICATION

Model	RCC-1115N
Rating voltage	230-240V
Rating frequency	50Hz
Input power	1000W
Dimensions	(LxWxH) 332 x 230 x 287 mm
Operational radius	7.5m

Customer Help Line : 0844 887 2525  
Spare Parts : 0844 557 0290 or [www.daewoo.co.uk](http://www.daewoo.co.uk)



# DESCRIPTION AND OPERATION



**HOSE CONNECTION**

- Connect hose: insert suction tube head of tube into hose socket, insert in the end and rotate it toward the left, then rotate in the end strongly
- Discharge hose: hold suction tube head and rotate it toward the right, then pull the hose out of the appliance

**SUCTION CONTROL**

- The suction power control at the hand grip enable you to control suction power

**ON/OFF SWITCH**

- Turn the unit off(on) by pressing the on/off switch button on the unit

**CORD REWIND BUTTON**

- Rewind the power cord by pressing the cord rewind button

**PIPE CONNECTION**

- To connect the nozzle, hold the tubes and the handle; insert the narrowed section into the wide section

**DUST METER**

- When the color of the dust meter is changed to RED for long time, change the dust bag

**FLOOR BRUSH**

- Easy to use this floor brush for cleaning both carpeted and uncarpeted floors

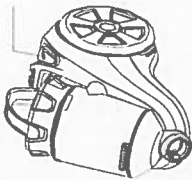
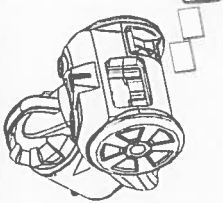
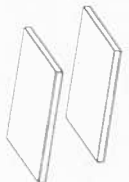
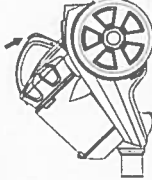
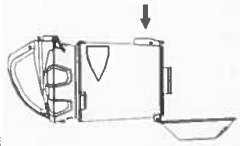
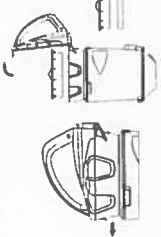
**COMBI CREVICE NOZZLE**

- Combi crevice nozzle is used for sofa, corners or crevice

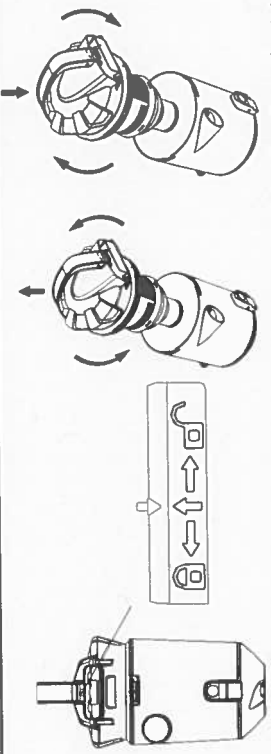
**PRACTICAL PARKING**

- After using, you can place the brush clip into the rear of unit

## CLEANING OR CHANGING THE FILTER

<p><b>EXHAUST FILTER</b></p> 		
<p>• Switch off</p>	<p>• Discharge the air outlet cover for clean up or a new replacement</p>	<p>• Separate the filter from the filter case and shake the dust out of the filter or replace new one</p>
<p><b>Clean or change filter of dust cup</b></p> 		
<p>• Switch off and Push the arrow button with the arrow then take out the dust cup from the body</p>	<p>• Separate the dust cup body and the dust cup cover then spill the dust</p>	<p>• Rotate the dust cup with the narrow and then separate the parts of dust cup cover, Wash the sponge with water then squeeze the sponge, dry it in the air and assemble back to cup or change it</p>

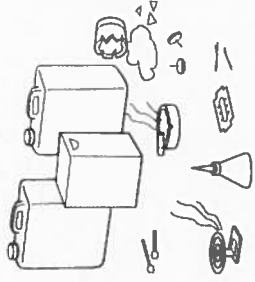

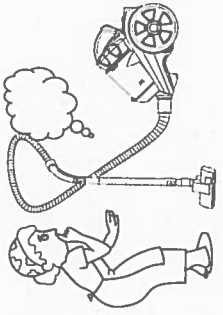
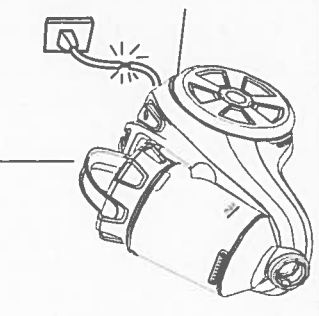
## CLEAN CYCLONE APPLIANCE



• Before opening, please check arrow mark on dust cup. Hold the handle and rotate it toward the left, then could take out the cyclone appliance from dust cup; After cleaning, please insert the cyclone appliance into the dust cup, then aim at the arrow direction, rotate it toward the right, it's completed when you hear a click.

## PRECAUTIONS FOR USE

This vacuum cleaner should only be used for normal dry household dust and dirt. The manufacturer cannot be responsible for any damage caused by use or operation of the cleaner contrary to these instructions. If the cleaner is wrongly operated for a purpose other than that for which it is intended, no liability can be accepted for any possible damage. Do not touch pins on plug after use as you need to allow time for the stored energy to dissipate.

<p>• Do not vacuum areas which contain moisture or water and inflammable matter, needles, pins, razor blades, matches, cigarette-ends, etc., since they may damage the cleaner or dust bag or cause a fire.</p> 	<p>• When rewinding the power cord, hold the plug body before pressing the rewind button to prevent whipping.</p> <p>• Do not pull the power cord beyond the specified length.</p> 
<p>• Make sure a filter are always inserted.</p> 	<p>• This product provided with a cable which, if damaged, must be replaced by repair shop authorized by the manufacturer since special tools are required.</p> 

## TROUBLE SHOOTING GUIDE

---

■ Please check the following details before you have your appliance repaired in an authorized servicing department:

Problem	Possible reason	Solution
Motor can't work	• Check if the power plug is firmly inserted into the outlet.	Insert the plug back again into the outlet to secure it is switched on.
	• Check if the power switch of the appliance is on.	And then turn the power switch on.
Suction power becomes weak	• Check if the dust is full.	Empty dust.
	• Check if the hose, floor brush or connecting tube is clogged	Immediately remove the obstruction
	• Check if the air filter is clogged	Clean the dust cup for reassembly of connecting tubes
Power cord will not fully feed back	• The power cord may be twisted.	Rewind or pull the cord in or out for several times by pressing the power cord rewind button.

Customer Help Line : 0844 887 2525

Spare Parts : 0844 557 0290 or [www.4daewoo.co.uk](http://www.4daewoo.co.uk)