

Limited Factory Warranty

B9Clean



Quick Start Guide

We'll show you how easy it is to get up and running with your B9Clean.

b9c.com/accessories

Intended Use

The B9Clean is an automated cleaning system that utilizes an agitated, contained volume of isopropyl alcohol (isopropanol) to clean excess uncured 3D printing liquid material from 3D printed parts ("parts"). Cleaning of parts and unit shall be done by trained professionals in 3D printing laboratory environments. The unit is not suitable nor intended for any purpose other than cleaning in these stated industries or recreations.

Malfunction

B9Creations hereby warrants that for a period of one year from the delivery date, this device shall be free from defects in material and workmanship. In the case the machine malfunctions under normal use, contact B9Creations for return process.

Repair

Repairs must be only carried out by B9Creations. If repairs or disassembly during warranty period are not carried out by B9Creations, warranty will expire immediately.

Warranty Exception

The warranty stated herein is the sole warranty applicable to B9Creations products. B9Creations expressly disclaims the liability for warranty even within warranty period for the following:

- Removal of protective enclosure components for ANY purpose voids equipment warranty.
- Only 3D printed parts made of cured resin shall be washed in the B9Clean. Cleaning anything that is not a resin-based, 3D printed part will void the warranty.
- Damages were caused by natural disaster.
- Fault or wrong operation from operator.
- Used for application other than curing light-cured material purpose.
- A malfunction or damage caused by repair, adjustment, or modification which is not carried out by B9Creations.
- A malfunction caused by abnormal power source or voltage.
- It is a consumption part.

(This warranty is subject to change without notice.)

In the Box

Quick Start Guide



Lid & Build Table Hanger



Outer Container



Inner Container & Plug



Base



Extended Build Table Hanger



Power Supply



Part Tray



2 Magnetic Stir Bars



3 Extra Foam Gaskets



Extra Container Plug

FOR INSTRUCTIONS
FOR SAFE USE, VISIT
www.b9c.com/support

1



Assemble

2



Fill

3



Place

4



Minutes

5



Speed

6



Start