


Subscription guide



Subscription

- In the **Subscription page**, the user can create notifications for any alarm that may occur at any level of the PV plant (chosen from the tree node on the left of the screen).

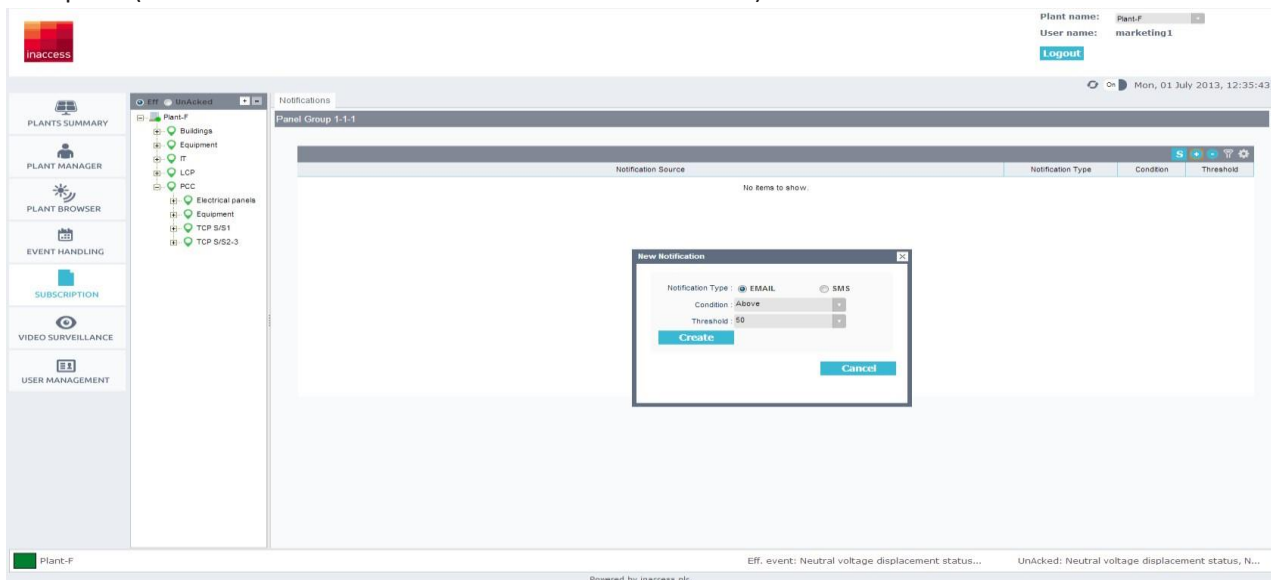

- The user must click on the “+” symbol to create a new notification (or delete an old notification with the “-” button). Then, he/she must choose if the notification should be sent by e-mail or SMS and the severity level. The severity level indicates that when a status changes above or below the specified number, a notification will be sent.
- For example, if the user wants to receive only severe alarms, he/she could enter a value **above 80 (at the plant level since the events propagate up to the upper level)**. In this way, whenever the status of a component that is functioning normally (severity “0”) or is in a state with severity lower than 80 passes to a severity of 80 or higher, a notification is sent immediately.
- Notifications are sent only when the state change lasts longer than 10 minutes.