

Key Fleet Freedom® Features

Businesses can now manage and assist their field employees in a whole new way.



Punch Clock ▶ The new Fleet Freedom® Mobile app & Magellan features enable employees to punch in and out of work. This means you can see who is currently on shift and working so dispatchers only assign work to people on shift.

Dispatch ▶ Most companies sell dispatch as a separate service. At Fleet Freedom®, we believe Dispatch is an integral part of managing mobile assets, and have therefore built this service into our platform.

Custom Reports ▶ Our reports are fully customizable. Build your reports to track utilization and maintenance data for vehicles and assets, or review employee productivity data and driver behaviour reports, all in the comfort of the Fleet Freedom® portal. In addition, you can now run payroll reports from Fleet Freedom®.

Driver ID ▶ This automated tool will display what vehicle or equipment an employee is driving. This is accomplished by the employee punching in and out on the Android, iOS apps or in-vehicle device.

Garmin & Magellan® ▶ Provides comprehensive vehicle support with its Commercial line of Navigation devices. Receive short messages and dispatches from Fleet Freedom®, and facilitate Driver ID, Punch Clock and Task delivery.

Trucking Routes ▶ Used with the Magellan and Garmin Dezl interface, we can provide dispatch navigation assistance based on the length, width, weight, and height + hazmat restrictions.

Mobile Optimized ▶ The site can be managed from any smartphone or tablet web browser. Run reports, assign dispatch tasks and see vehicle and employee location, all on the go.

Images ▶ This great dispatch aid allows you to upload images of your employees so they are more easily identifiable in our system. When a vehicle or asset arrives at a location, the Google Street View image is displayed to give you a visual frame of reference regarding that location.

Hybrid Geo-zones ▶ called "Places" in Fleet Freedom®. Compatible hardware automatically receives coordinate boundaries of geo-zones and updates Fleet Freedom® the second an asset enters/exits. Simply create your new place in Fleet Freedom®, and we will automatically add it to the hardware in the field.

FLEET FREEDOM®

sales@fleetfreedom.com | 1.866.787.2548 ext. 1 | fleetfreedom.com

630 The East Mall, Etobicoke, ON Canada M9B 4B1