

Product Name	Loris LR Configuration Tool Guide
Product Owner	Rohail Rasool
Rev #	1.0
Release date	10 th Feb 2018

Loris Pro2 can be configured using Loris Pro 2 configuration App.



- 1) Connect Button: After Plugging in Loris wait for 2 minutes then click connect to make connection.
- 2) Disconnect Button: Disconnect Loris
- 3) Read Button: Read configuration from Loris
- 4) Write Button: Write configuration in Loris
- 5) Reboot Button: Reboot the hardware. Note that reboot is required after changing configuration
- 6) Exit Button: Close the configuration application
- 7) Connection Status: Shows the connection status
- 8) Firmware version: Show the firmware version of Loris
- 9) Device ID: Device ID of Loris.
- 10) APN Name: APN Name of Data SIM
- 11) APN User Name: APN User Name of data SIM. If there is no user name leave it blank.
- 12) APN Password: APN password of data SIM. If there is no password leave it blank.
- 13) Enable/Disable BLE Sensor
- 14) Sensing Rate: 0 for active Scanning. While any other number will open scanning at that particular interval
- 15) Posting Rate: After x interval posting of data to cloud server will be performed. 0 for as active posting

- 16) RSSI Calibration: Record and send data of BLE Beacons which power higher than specified power level
- 17) Enable/Disable Vehicle Sensor
- 18) Sensing Rate: 0 for active Scanning. While any other number will open scanning at that particular interval
- 19) Posting Rate: After x interval posting of data to cloud server will be performed. 0 for as active posting
- 20) Status: Shows the status of operation performed