


Procedure to configure touch panel operation for extended display mode (Windows 7 Instructions)

1. Right-Click on your mouse and select “Screen resolution”

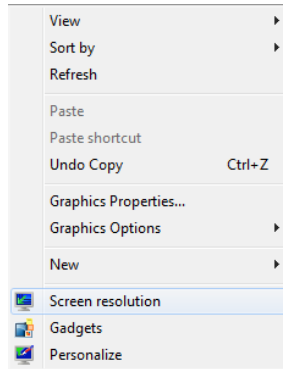

2. With your mouse, click on the number 2 display. Next in Multiple displays select Extend these displays.

Change the appearance of your displays



Display: 2. ViewSonic VP930 Series

Resolution: 1280 × 1024 (recommended)

Orientation: Landscape

Multiple displays: Extend these displays

Duplicate these displays

Extend these displays

Show desktop only on 1

Show desktop only on 2

What display settings should I choose?

[Advanced settings](#)


OK

Cancel


Apply

Procedure to configure touch panel operation for extended display mode (Windows 7 Instructions)

3. Go to Start and click on Control Panel

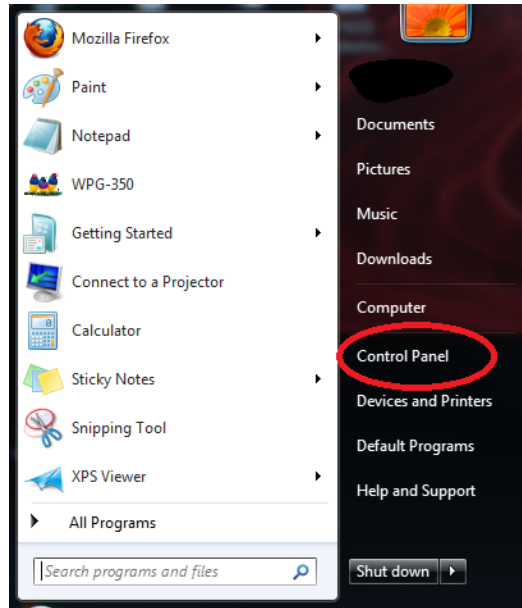


4. Click on Hardware and Sound

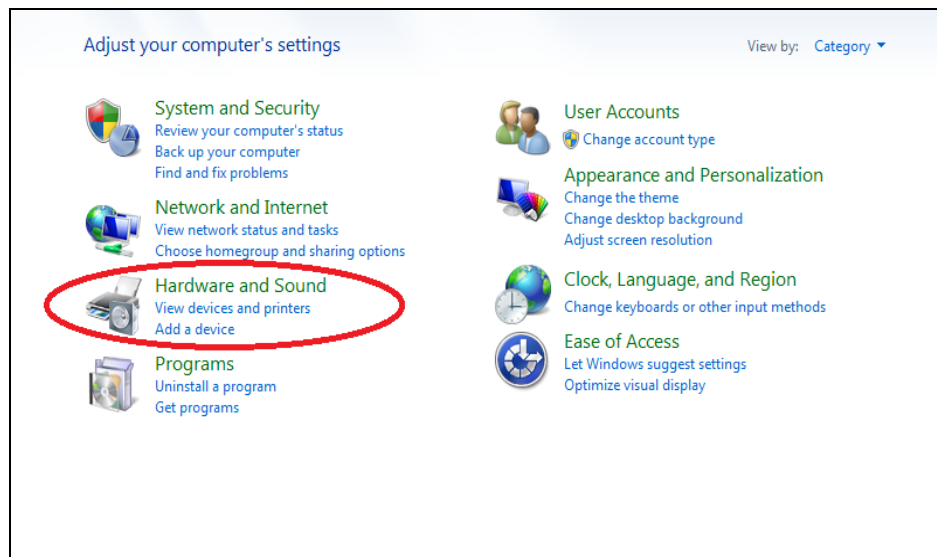


Procedure to configure touch panel operation for extended display mode (Windows 7 Instructions)

5. Click on Tablet PC Settings

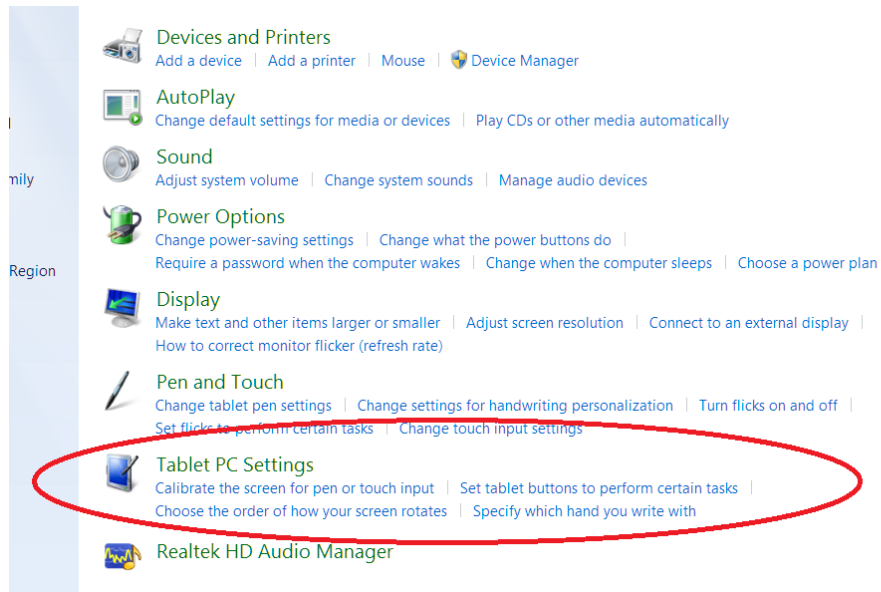


Or... Control Panel → Tablet PC Settings (**Note:** This is if your Control Panel is in Category View, under **View by**, click either **Large icons** or **Small icons**)

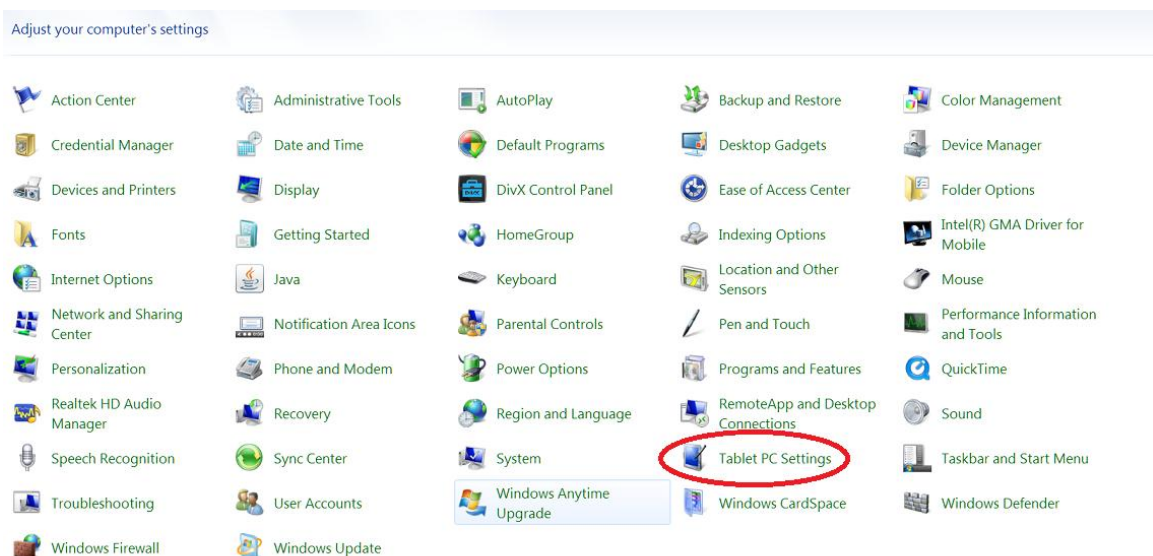


Procedure to configure touch panel operation for extended display mode (Windows 7 Instructions)

6. Under the Display tab, click the "Setup..." button to the right of "Configure your pen and touch displays."

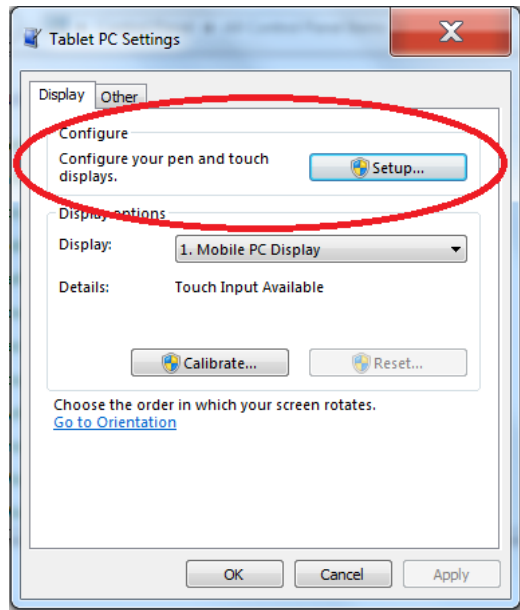


7. Next, take your finger and touch the panel where the computer has displayed the message "Touch this screen to identify it as the touchscreen". This will allow the computer to "synchronize" this touch panel with the specific display. You should now be able to see mouse pointer at any point the screen is touched.

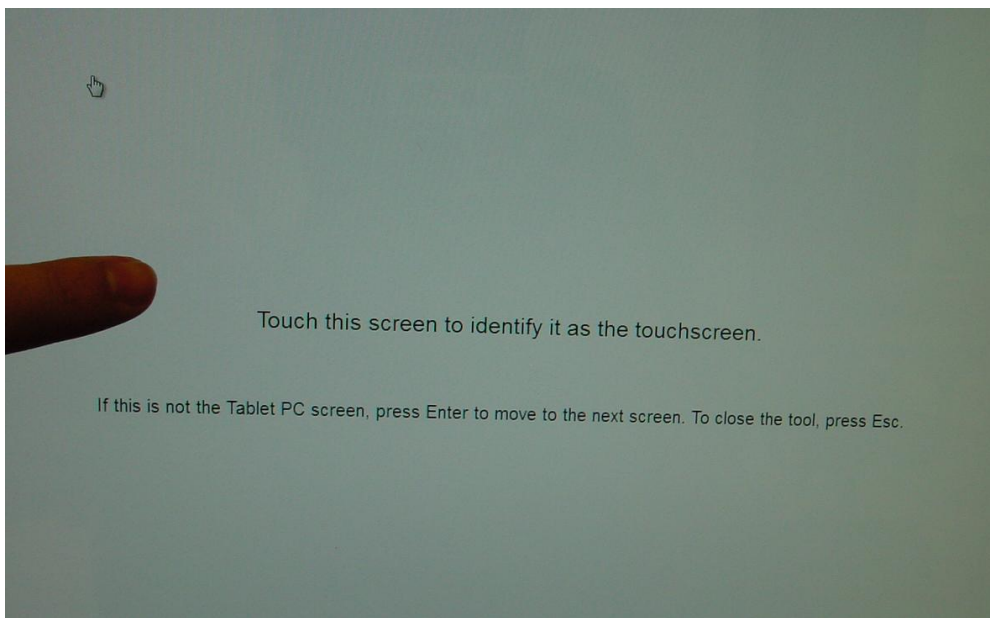

Procedure to configure touch panel operation for extended display mode (Windows 7 Instructions)

8. Follow the screen prompt and press the "Enter" key and repeat step 5 and 6 for additional extended displays.

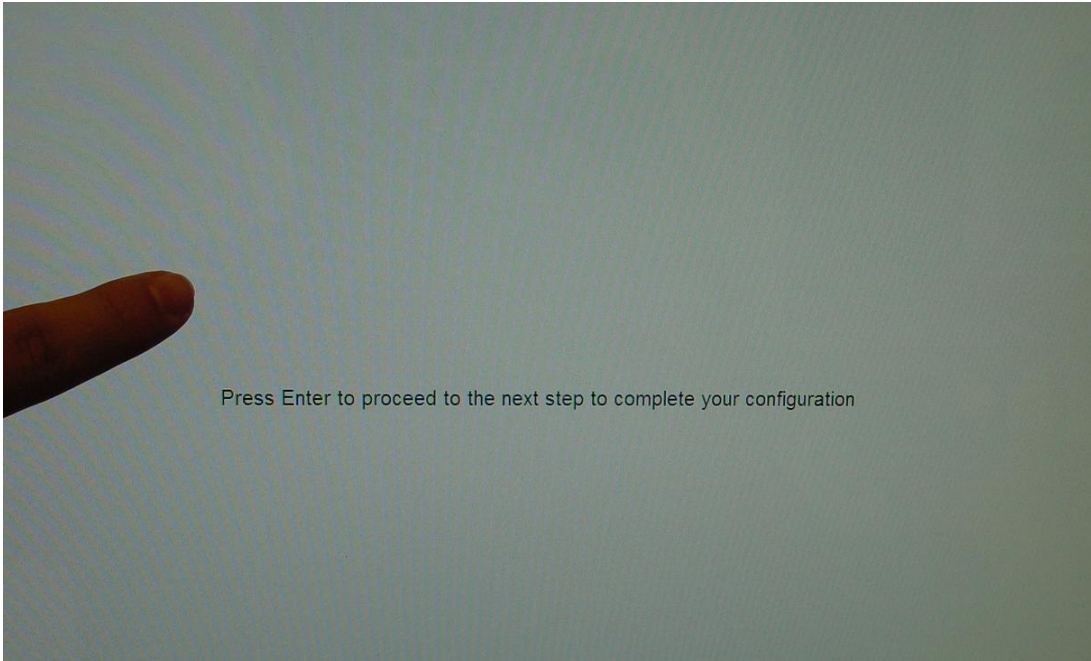

9. Once you have completed this process, the touch panels will be "synchronized" to its' respective monitor display.
10. Please click the "OK" button to close out the Tablet PC Settings. Touch panel configuration for extended display mode is now complete.