



LEDs**	HAPTIC	DESCRIPTION OF SIGNAL
BATTERY		
3 solid green	no	Full battery
2 solid green	no	75% battery
1 solid green	no	50% battery
1 flashing green	no	25% battery
1 middle red flashing (x10)	x3	Critical battery level
TEMPERATURE SETTINGS		
1 flashing amber	no	Setting 1 (low)
2 flashing amber	no	Setting 2 (medium)
3 flashing amber	no	Setting 3 (high)
1 flashing red	no	Setting 4 (F1)
2 flashing red	no	Setting 5 (F2)
3 flashing red	no	Setting 6 (concentrates)
VAPING		
1 middle solid green	no	Unit in vape mode
1 middle solid amber	no	Unit in concentrate mode and warmed up
1 green moving side to side	x1 (short)	Preheat of vape
3 solid green	x1	Signal to start vaping
3 flashing green	no	Vaping phase
APP		
1 green moving side to side	no	Pairing mode
3 flashing green (x6)	x1	Device paired to unit
alternating 1 middle amber - 2 amber out	no	Bootloader mode (start update)
1 amber moving side to side	no	Firmware update in progress
3 flashing amber (x3)	no	Update completed
LOCK/UNLOCK		
3 flashing red (x3)	x2	Vape locking
3 solid red (for 1-2s when button pressed)	no	Vape locked
3 flashing green (x3)	x2	Vape unlocking
DEVICE ERRORS		
3 flashing red (x10)	x3	PCB overheat
3 constant solid red (when no button is pressed)	no	System failure - Coil failure
1 solid middle red and 1 green flashing side to side (x4)	x1	Door open
CALIBRATION		
1 middle flashing amber (for 2s)	no	Calibration mode - unit on factory power
1 middle flashing amber and 1 solid green to the right (for 2s)	no	Calibration mode - unit power turned down
1 middle flashing amber and 1 solid red to the left (for 2s)	no	Calibration mode - unit power boost