

USB Drive (provided)



Clickshare Button



1. Locate Clickshare button and Base
2. Insert Pre-loaded Firmware into base station
USB Port
3. Wait for loading and reboot
4. Insert Button to update button