

Our Business Helping Your Business

Meter Reading Guide

Konica Minolta C250/C252/C352/C450

Meter Reading is obtained by pressing -
'Utility' button, followed by pressing 'Details' located on the LCD panel.
This will provide an option to print the reading.
Press print, choose the A4 tray then press the green print button.
Supply the colour and black and white meter reading separately.

Konica Minolta C350

Meter Reading is obtained by pressing -
'Utility' button, followed by pressing 'Counter List' located on the LCD panel.
This will display meter reading & also provides an option to print the reading.
Place A4 landscape in tray one first if you wish to print.
Supply the colour and black and white meter reading separately.

Konica Minolta C203/C253/C353

The meter count screen can be displayed so that the total number of prints since counting started can be viewed.
Press utility/meter count key, touch meter count and then check details on the left panel.
Meter one is the black reading and meter two is the colour reading.
There is an option to print the meter reading page.
Supply the colour and black and white meter reading separately.

Konica Minolta C451/C550/C650

The meter count screen can be displayed so that the total number of prints since counting started can be viewed.
Press utility/meter count key, touch meter count and then check details on the left panel.
Meter one is the black reading and meter two is the colour reading.
Supply the colour and black and white meter reading separately.

Konica Minolta C4000P/C4700P

Press settings, then press OK.
Press reports, then press OK.
Press device statistics, then press OK.
A meter reading report will print.

Konica Minolta 3301P

Press Spanner icon/button, then arrow right to Reports.
Press OK, then arrow right to Device Statistics.
Press OK, the Report will then print.

Konica Minolta 3320/4020

Press Spanner icon/button, then arrow right to Reports.
Press OK, then arrow right to Device Statistics.
Press OK, the Report will then print.
The meter reading is on the 1st page.

Konica Minolta C3110/C3100

Press the arrow up/down buttons to display "Report/Status"
Press Select Key.
Choose Counter and the device will show the meter reading.
Supply the colour and black and white meter reading separately.

Konica Minolta C3350/C3351/C3850/C3851

Press Home/Menu button to enter the main application menu.
Then touch the Counter button on the touch screen display.
This will bring up the Total Black & Total Colour meter reading.
Supply the colour and black and white meter reading separately.

Konica Minolta 224, 284, 364, C224e, C284e, C364e, 4 series mono

Press Home/Menu button to enter the main application menu.
Then touch the Counter button on the touch screen display.
This will bring up the Total Black & Total Colour meter reading on the left.
Supply the colour and black and white meter reading separately if device is colour.

Konica Minolta 258, C227, 308, 360i, C258, C250i, C368

Press Home/Menu button to enter the main application menu.
Then touch the Counter button on the touch screen display.
This will bring up the Total Black & Total Colour meter reading on the left.
Supply the colour and black and white meter reading separately if device is colour.

Konica Minolta C220, C222, C308

Press Home/Menu - Utilities
Then touch the Counter button on the touch screen display.
This will bring up the Total Black & Total Colour meter reading on the left.
Supply the colour and black and white meter reading separately if device is colour.

Konica Minolta 458/558/658/C458/C558/C658

Press Home/Menu button to enter the main application menu.
Then touch the Counter button on the touch screen display.
This will bring up the Total Black & Total Colour meter reading on the left.
Supply the colour and black and white meter reading separately if device is colour.

Konica Minolta 658/758/C658/C758/C759

Press Home/Menu button to enter the main application menu.
Then touch the Counter button on the touch screen display.
This will bring up the Total Black & Total Colour meter reading on the left.
Supply the colour and black and white meter reading separately if device is colour.

Sindoh D310/D311

Press Home/Menu button to enter the main application menu.
Then touch the Counter button on the touch screen display.
This will bring up the Total Black & Total Colour meter reading on the left.
Supply the colour and black and white meter reading separately if device is colour.

Lexmark M3150

- Select settings (spanner) at bottom right.
- Select device statistics.
- Select reports and if necessary print.

Lexmark C6160/XC6160/C4140-50/XC4140-50/XM1246/XM1145/XC9235-45-65

- Most Lexmarks since 2018
- Select settings (spanner) on the screen (if you cant see it swipe left or right on a touch screen
- Select device statistics.
- Select reports and if necessary print.
- or you can select the customer support app then page count then print