

## Clean the Printhead Lenses

The printer is constructed with four printhead lenses. Clean all lenses as described in the following procedure:

**CAUTION: Do not perform this procedure when the printer is copying or printing.**

1. Open the Front Cover of the printer.



2. Turn the orange lever to the left.



3. Pull the Drum Cartridge Cover down until it clicks into the open position.



4. Each of the four printheads has its own cleaning tool. Slowly pull the printhead lens cleaner out until the three dots are visible.



**NOTE:** The printhead lens cleaner does not detach from the printer.



5. Slowly push the printhead lens cleaner back into the printhead until it stops.
6. Repeat steps 4 and 5 for each printhead.
7. Close the Drum Cartridge Cover.



8. Turn the orange lever to the right to return it to the locked position.



9. Close the Front Cover.