



# M60 VOICE RECORDER PEN

INSTRUCTION MANUAL

# THANKS FOR YOUR ORDER!

## HAPPY? NOT HAPPY?

We're only happy when you're happy. Our friendly and hassle-free customer service team will work hard to put a smile on your face. Give us a call or shoot us an email.



[\(208\) 557-9460](tel:(208)557-9460)




[support@penrecorderpro.com](mailto:support@penrecorderpro.com)



[Leave a review on our website](#)

## 1-YEAR WARRANTY

All PenRecorderPro products and accessories are guaranteed against manufacturing defects for 1 year from date of purchase. PenRecorderPro's sole responsibility, if there is a defect, is to replace or repair the defective product with the same or updated version of the product. The decision is at PenRecorderPro's sole discretion. The warranty will not cover damage that results from daily use, normal wear and tear, or accidents. As always we are here to help. If you have questions simply drop us a line.

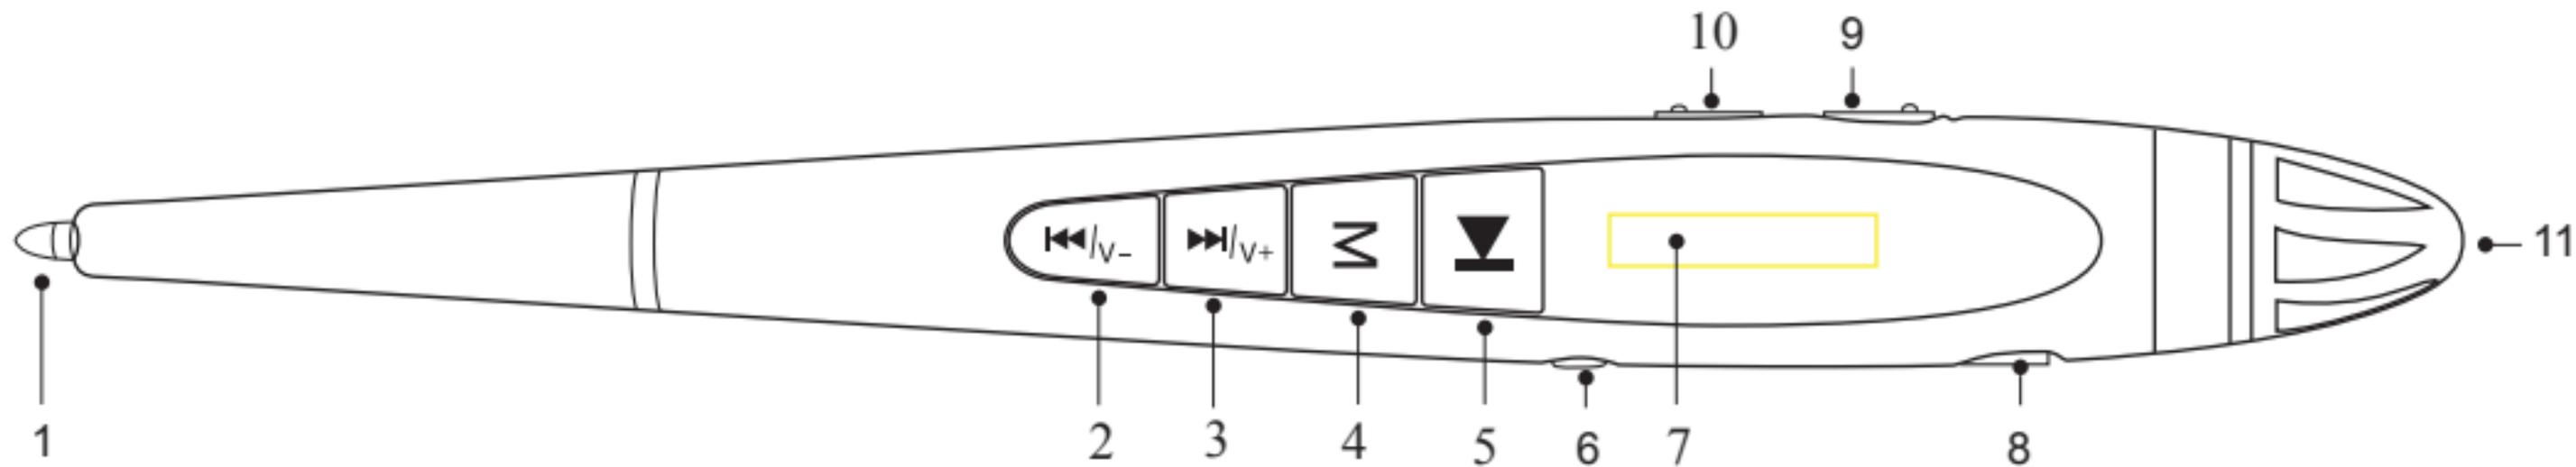

1. Ink tip

2. Next/Volume -

3. Back/Volume +

4. Mode

5. Play/Pause

6. Laser On/Off

7. OLED Screen

8. Headphone Jack/USB

9. Start/Stop Recording

10. On/Off

11. Laser Pointer

## Operation Instructions

### (I) Turn on

1. Turn the power switch to the "ON" position, the product will automatically turn on

### (II) Turn off

1. The pen will automatically turn off if it is not operated for 3 minutes
2. Press and hold the "Play" button for about 5 seconds for soft closedown
3. Directly turn the power switch to the "OFF" position to turn off the pen

### (III) Basic Operation

1. Switch between Voice Mode and Music Mode: while in standby, press and hold the "M" (mode) button;
2. Menu Operation: at any time, press the "Mode" key to show the menu, and then press the "Mode" key to confirm and return; press the "Play" key to quickly exit the menu. asdkjbsfkjhsfkjhds
3. Volume Adjustment: under Play state, press and hold the "Next" (V+) or "Back"(V-) key to increase or decrease the volume.

### (IV) Voice Mode

Under the standby state of Voice Mode, press the "Mode" key to show "Delete File", "Delete All", "Recording Type", "Voice Control Switch ", "Exit" menus, press the "Back/Next" key to switch and then press the "Mode" key to confirm your selection.

**1. Recording Type:** adjust the recording quality between 32Kbps, 64Kbps, 128Kbps, 192Kbps and 384Kbp. Press the "Back/Next" to select, press the "M" key to confirm, press "Play" key to quickly exit the menu without saving.

**2. Delete File:** delete single file when "Voice Mode" is in standby, press the "Back/Next" key to select YES NO, then press the "Mode" key to confirm. Press the "Play" key to quickly exit the menu without deleting any file.

**3. Delete All:** delete all files in the record folder, press the "Back/Next" key to select YES or NO, then press the "Mode" key to confirm Press the "Play" key to quickly exit the menu without deleting any file.

**4. Voice Control Switch:** under "OFF" state, acoustic control is

unavailable; under "ON" state, acoustic control is available.. Press the "M" key to select.

**5. Exit:** exit menu. (V) Recording

Move the recording switch to the "Rec" position to start recording, move it to the "Save" position to stop recording and save the file.

\*\*\*Save the file after recording before turning off the product. The recording file will not be saved if the power switch is turned off before first moving the other switch to "save". The recording file will be automatically saved if the product turns off under low power.

## (VI) Audio Playback

When playing, press the "Mode" key to show "Cycle Mode", "Cycle Mode", "Exit" menu, press the "Back/Next" key to switch and then press the "Mode" key to select the menu.

**1. Cycle Mode:** the product supports "Catalog Repeat", "All Repeat", "Random Play", "Browse Play", "Common Mode", "Single Cycle", "Catalog Play" are available, press the "M" key to confirm selection, press the "Play" key to quickly exit the menu.

In above modes, "Browse Play" only plays the first 10 seconds of every song and then switches to the next song

Any cycle mode selected will immediately take effect, press any key to

exit and save automatically

**2. Repeat Mode:** press the "M" key to select point A, press "M" key again to select point B, after confirming point A-B, the program will play circularly between point A-B, press the "M" key again to exit Repeat, or press "Play" key to exit Repeat Mode.

**3. Exit:** exit menu.

## (VII) Music Mode

Under the standby state of Music Mode, press the "Mode" key to show "Delete File", "Delete All", "Exit" menus, press the "Back/Next" key to switch.

Operation is the same as that of the Voice Mode, the "Recording Type"

here is the same as the "Recording Type" under the "Voice Mode", but it deletes the music file instead of the recording file here.

## **(VIII) Play Music**

When playing, press the "M" key to show "Cycle Mode", "Sound Effect Mode", "Exit" menu, press the "Back/Next" key to switch and then press the "M" key to select the menu.

**1. Cycle Mode:** the product supports "Catalog Cycle", "All Cycle", "Random Play", "Browse Play", "Common Mode", "Single Cycle", "Catalog Cycle" are available, press the "M" key to confirm the selection, press the "Play" key to quickly exit the menu.

In above modes, "Browse Play" only plays the first 10 seconds of every

song and then switches to the next song

Any cycle mode selected will immediately take effect, press any key to exit and save automatically

**2. Sound Effect Mode:** the product supports "Natural", "Rock and Roll", "Pop", "Classic", "Mild", "Jazz", "Bass", press the "M" key to confirm, press "Play" key to quickly exit the menu.

These settings will immediately take effect if any Sound Effect Mode is selected, and the sound effect may change when selecting, press any key to exit and save automatically.

**3. Exit:** exit menu.

### **(IX) Laser Pen Function**

While the pen is charged, press the "Laser Pen" button to activate the laser pointer, release the button to turn off the laser.

### **(III) Connect with Computer**

Connect one end of the USB cable with the pen, and the other end with the USB interface of the computer

The product can play or record when charging, therefore, it can connect with the computer after turning off, or charge after turning on.

### **(IV) Charging**


Connect one end of the USB cable with the product, and the other end with the USB interface of the computer

Specification of Charger: 5V 500mAh, charging for about 3 hours to get full

Please turn the power switch to On state when charging

## Replacing Ink


1. Hold the tip and pull it out

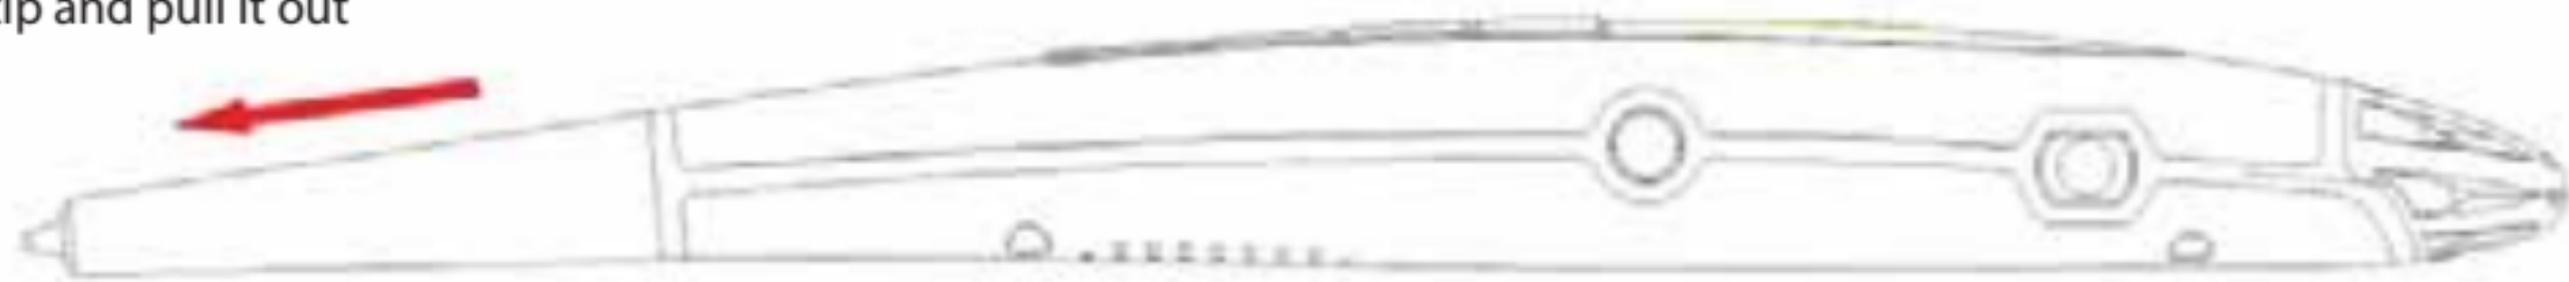

2. Turn the cap to remove ink cartridge



3. Replace ink cartridge

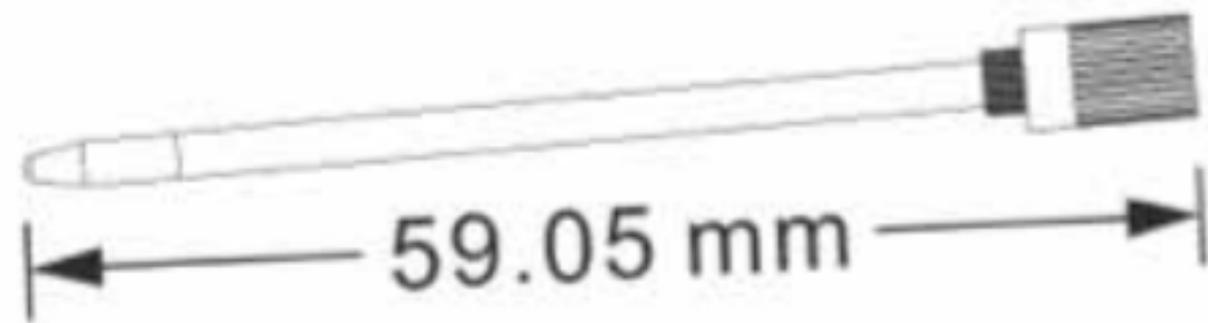

# PENRECORDERPRO

VISIT US ONLINE [WWW.PENRECORDERPRO.COM](http://WWW.PENRECORDERPRO.COM) CE  FC 

PenRecorderPro and their respective logos are trademarks of Teton Webstores LLC, in the United States and all other countries. Copyright © 2015. All rights reserved.

|                  |                               |
|------------------|-------------------------------|
| Dimensions       | 155 x 13 x 14mm               |
| Weight           | 46 Grams                      |
| Display          | 96 x 16 OLED                  |
| Laser            | 6mm                           |
| Memory           | 8GB or 16GB                   |
| Battery          | 3.7V/160mA / 20hr Record Time |
| Music Format     | MP3, WAV, WMA                 |
| Recording Format | WAV 32kbps-384kbps Adjustable |

|                  |                                |
|------------------|--------------------------------|
| Earphone Output  | Max Output: 10mW+10mW (320hm)  |
|                  | Frequency Response: 20Hz-20KHz |
|                  | SNR: >80dB                     |
|                  | Distortion: 0.05%              |
| Working Temp.    | -5 to 40 Celsius               |
| Display Language | English                        |
| Compatible OS    | Windows/MAC                    |
| USB Interface    | USB 2.0 High Speed             |