

SECTION 3 -- Exhaust Damper Setup

There are two exhaust dampers on the wet section of the machine. One damper is in the load end and one in the middle of the machine.

Load End Damper



Load damper is located on the inside of the load end cover. There are two wing nuts inside the box. The damper moves horizontally into the machine.



Load end cover pulled back to show damper.

Push the damper “in” to reduce the exhaust draw and pull it out to allow more exhaust draw.

Tighten wing nuts when exhaust is at desired draw rate.


Middle exhaust damper



Damper rod is located inside the rinse section at the top of the machine. The damper is inside the exhaust duct and can not be seen. When the rod is pulled out, the exhaust is fully open, and when it is pushed in it is fully closed.

Never close the damper fully as machine will steam out the dryer section.

Do not twist the damper rod. It could come off the damper rod mount.

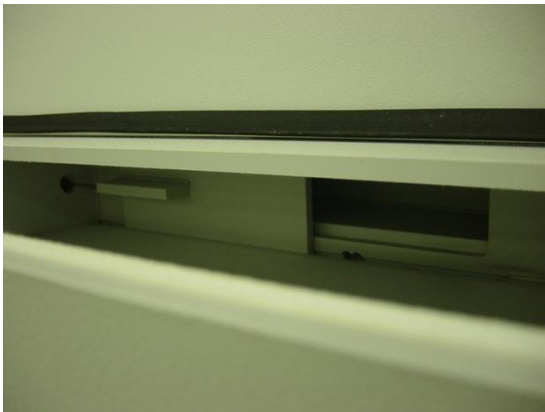

Cut away showing the exhaust damper in the open position.