

1

Lift the tiller locking clamp



2

Pull the down down away from the bar



3

Slide the mechanism left and push the tiller bar away to expose a bolt



4

There is a bolt that
can be slightly
loosened



5

Using an allen key, loosen the bolt,
straighten out wheels with tiller bar and
then tighten down strongly. May need
to hold bar when tightening



6

Ensure the bolt is very tight, close back
up the tiller bar and lock the tiller bar

