


SMARTVU X TV DONGLE


Quick Start Guide




Front

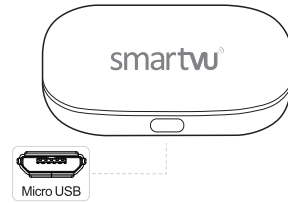

Back

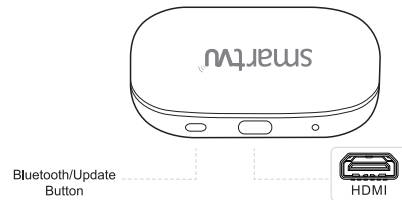

Bluetooth Remote

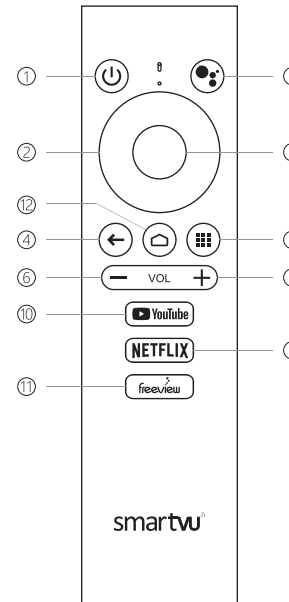

	Button	Description
01		POWER ON/OFF
02		DIRECTION/NAVIGATION
03		OK
04		RETURN/BACK
05		APPS
06		VOLUME DOWN
07		GOOGLE ASSISTANT
08		VOLUME UP
09		START NETFLIX
10		START YOUTUBE
11		START FREEVIEW
12		HOME

Google, Google Play, YouTube, Android TV, Chromecast and other related marks and logos are trademarks of Google LLC.

Dish TV Technologies LTD

www.dishtv.co.nz | 0800 347 488 | support@dishtv.co.nz

Connect to TV


Display:

Connect one end of the HDMI Cable provided into the HDMI Port on the back panel of your TV Dongle, while connecting the other end of the HDMI Cable to an HDMI Port on the TV.

Power:

Connect one end of the Micro USB Cable provided to the TV Dongle, while connecting the other end to the Power Adapter provided.

Note, use of the USB Port on your TV is NOT recommended, as they often provide insufficient power for the TV Dongle.

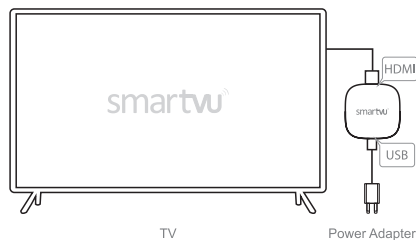


TV

Power Adapter

TV Input

To use your TV Dongle, ensure your TV has the HDMI input that the TV Dongle is connected to selected (HDMI2, etc...).

Press the **INPUT** or **SOURCE** button on your TV Remote to access the TV's input selection menu.

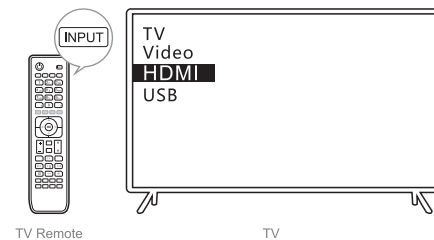

TV Remote

TV

Bluetooth Remote Connection


To pair the Bluetooth Remote with your TV Dongle, both the Bluetooth Remote and TV Dongle will need to enter 'pairing mode'.

TV Dongle:

While the TV Dongle is powered on, press the **BLUETOOTH** button for the TV Dongle to enter 'pairing mode'.

Bluetooth Remote:

Place the Bluetooth Remote within 30cm of the TV Dongle. Then press and hold both the **RETURN** and **APPS** buttons simultaneously, until the LED Indicator flashes quickly. This indicates the Bluetooth Remote has entered 'pairing mode'.

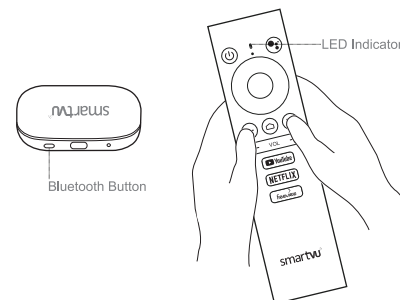

Bluetooth Button

LED Indicator


Connect to a Network

This TV Dongle supports Wireless Network connection, use of a Wired Network connection requires a suitable Ethernet Adapter (not included).

Refer to **Home > Settings > Network Setting** to enable the Wireless Network and setup a connection to your local WiFi.

Note, for better WiFi connection keep the TV Dongle vertical.

As the distance between your Modem/Router and TV Dongle will affect your WiFi performance, ensure both are positioned to maximise coverage and connection.

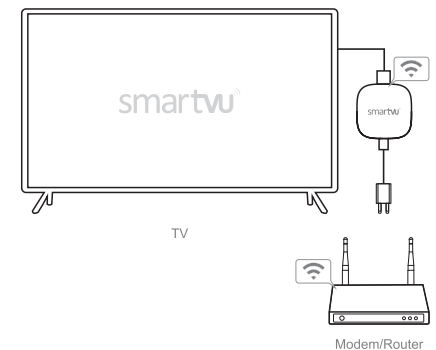

TV

Modem/Router