



Description

Removing and replacing inverter


Note: Computer should be removed before starting.

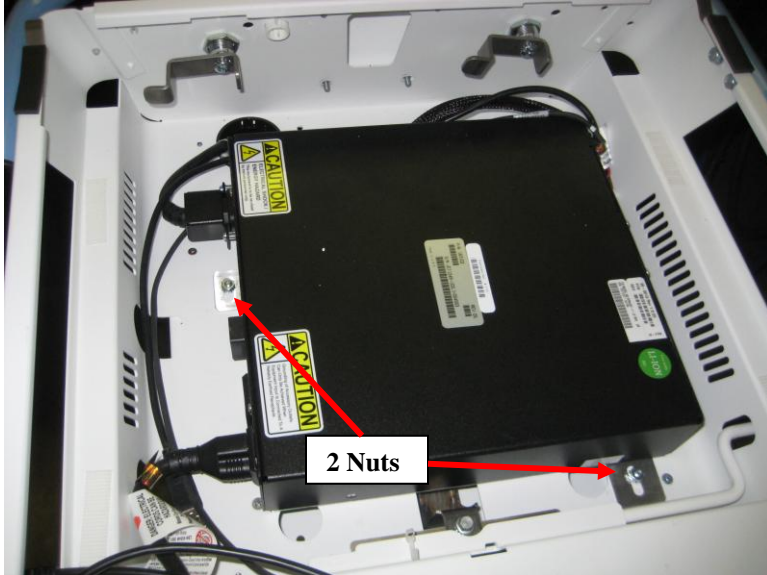


1) Remove 2 nuts shown, securing inverter.

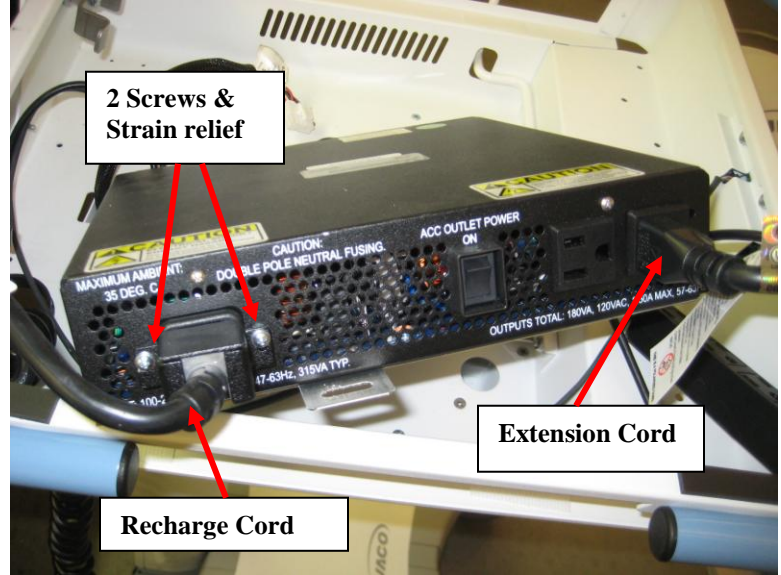



2) Lift inverter, remove 2 screws shown and remove strain relief with recharge cord. Unplug extension cord. Note: Screws, strain relief and extension cord will be reused. Some newer revision carts do not have strain relief.

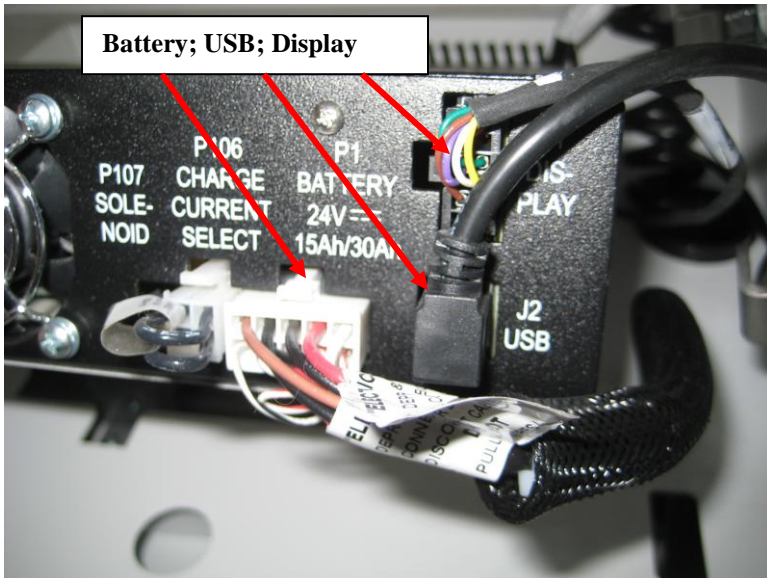

3) Unplug Battery, USB and Display cables shown.

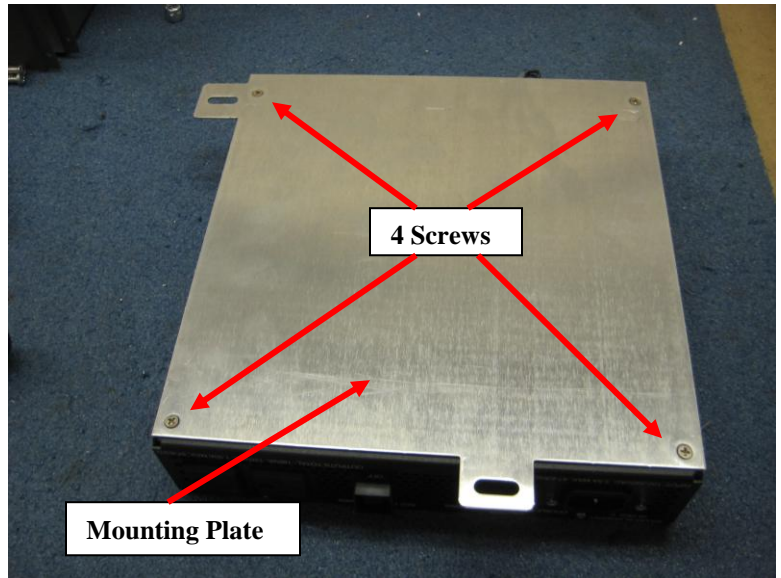


4) Remove mounting plate from old inverter and install onto new one with 4 screws shown. Be sure orientation is correct.

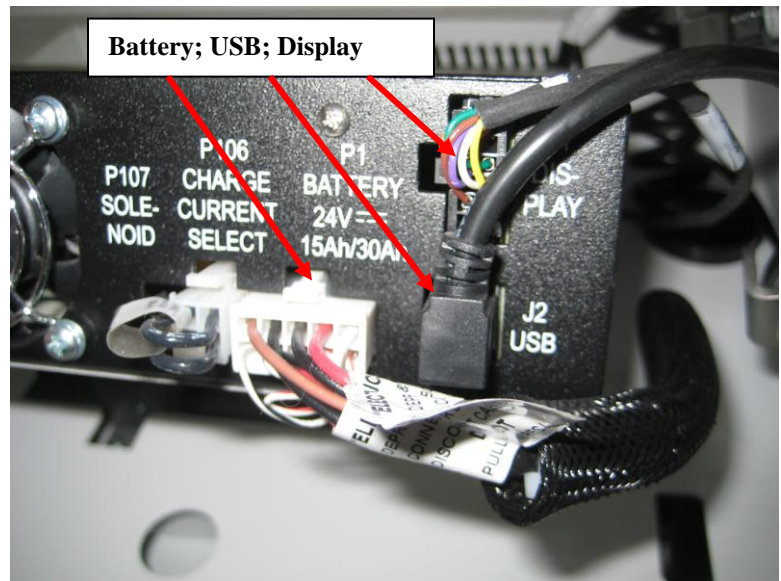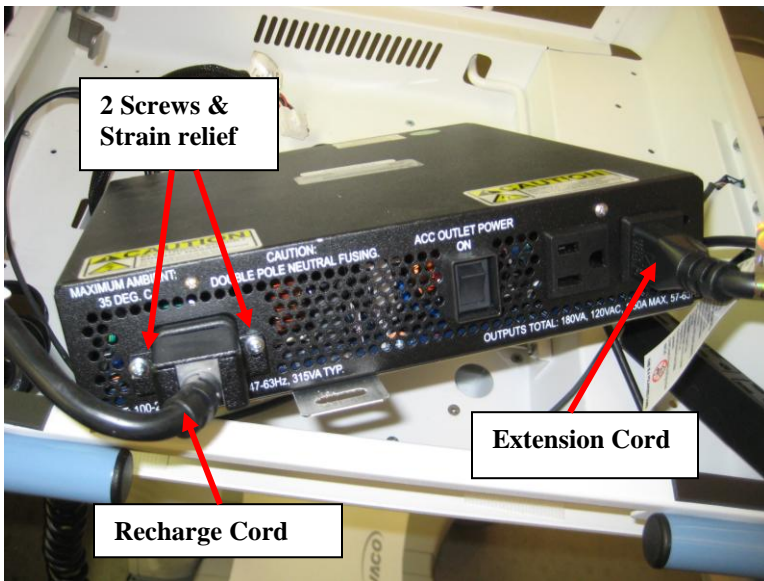

5) Plug in recharge cord with strain relief, secure with screws removed in step 2. Plug in extension cord.

6) Connect Battery, USB and Display cables as shown.

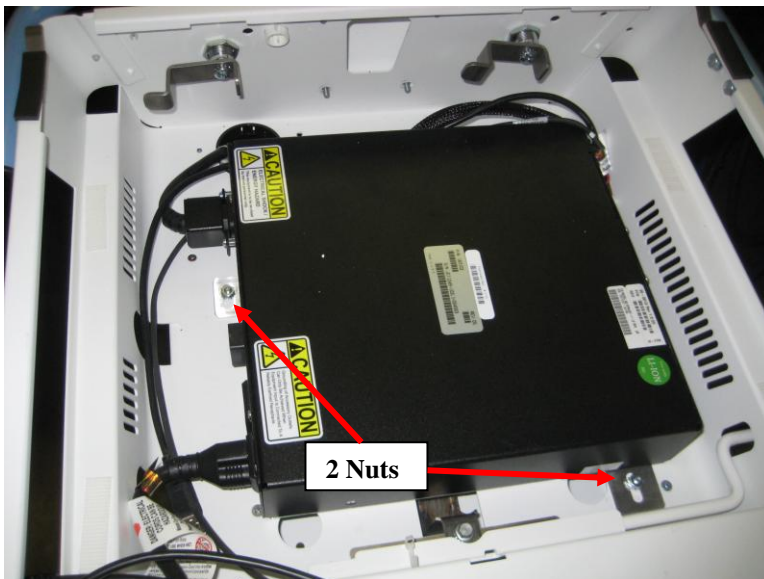

7) Position new inverter in place and secure with 2 nuts as shown.