



1. Introduction

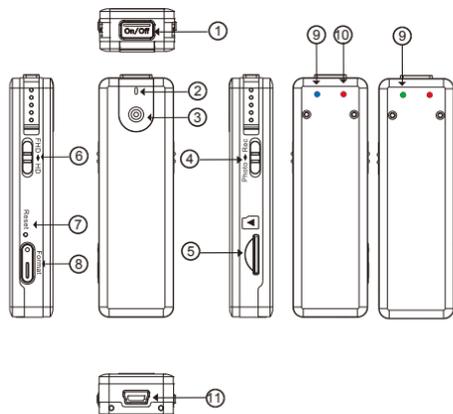


1. Power On/Off Button
2. Microphone
3. 5MP Camera
4. Photo/Rec Switch
5. Memory Card Slot
6. FHD/HD Switch
7. Reset Button
8. Format Button
9. Blue LED: Power On
Green LED: Charge
10. Red LED: Rec
11. USB Port

2. Package Content

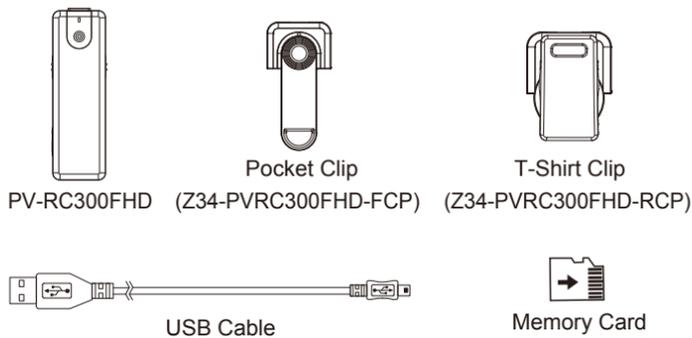

1

3. Charging Battery

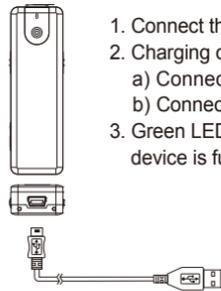

1. Connect the USB cable to the socket on the bottom of the device.
2. Charging options:
 - a) Connect the other end of the cable to a PC.
 - b) Connect the other end of cable to an USB charger
3. Green LED will turn on while charging and turn off when the device is fully charged.

4. Inserting Memory Card


1. Insert memory card gently into card slot on the side as shown on illustration.
2. Ensure insertion placed in proper direction as indicated.
3. To eject the card, gently press memory card to release from the device.

5. Format Memory Card

1. Insert memory card gently into card slot on the side.
2. Ensure insertion placed in proper direction as indicated.
3. Power on the DVR then press and hold Format Button for 5 seconds.
4. The blue and red LED will blink alternately.
5. When format completed, the DVR will be on standby mode.

2

6. Covert Application

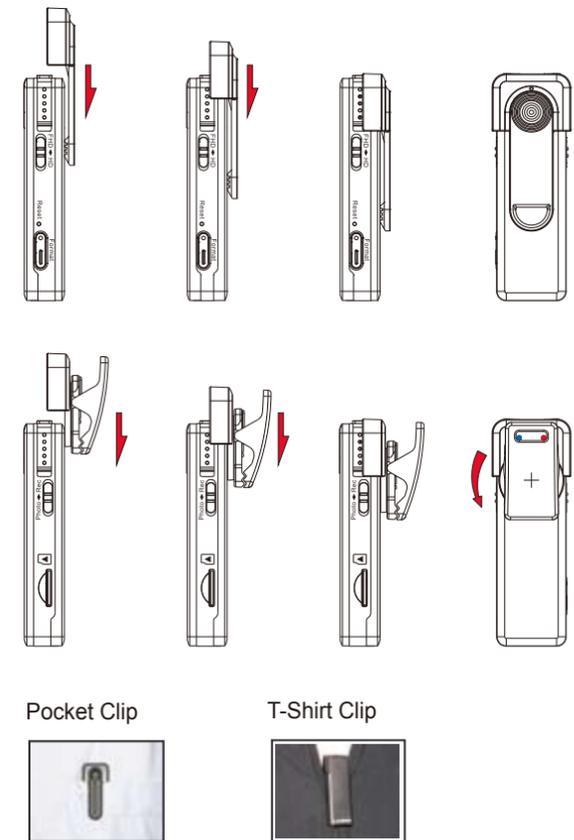

3

7. Video Recording

1. Slide FHD/HD switch to preferred video resolution.
2. Slide Photo/Rec switch to Rec position.
3. Turn on the DVR.
4. Short press the On/Off button to start or stop recording.
5. The red LED turns on during recording.

8. Photo Taking

1. Slide Photo/Rec switch to Photo position.
2. Turn on the DVR.
3. Short press the On/Off button to take a photo.
4. The red LED blinks once when the On/Off button is being pressed.

9. Date and Time Setting (for Windows Computer)

1. Right-click on Windows desktop. Choose Notepad to create a *.txt (text) file. Then double-click the text file.
2. Suppose current time is May 3, 2014 15:00. Enter date and time information as 2014.05.03 15:00:00 **Note that a space must be present in between date and hour and time is in 24-hour format.**
3. Name the file as **settime.txt** and save it to the root directory of the memory card.
4. Insert the memory card to the slot then power on the device. The date and time setting is now completed.
5. Please note when the date and time information is successful set to the device the settime.txt file should not be visible when you connect the device to the computer again.

4

10. Retrieving Data

1. Video and photo files are stored in the memory card.
2. There are two ways to download video and photo files.
 - 2.1 Using memory card reader to download video and photo files.
 - 2.2 With the device powered on and memory card inserted, connect the device to PC by USB connection. It will be recognized by PC as an external drive for user to download the video and photo files.

11. Using PV-RC300FHD as a Webcam


1. Remove memory card from the device, connect to PC by USB cable then power on the device.
2. PC detects the device as a webcam and installs automatically, no driver is needed for installation. (For XP, Vista & Windows 7)
3. Installation completed, webcam is now functional.

5

PV-RC300FHD

1080p CamStick DVR with 5MP Camera

Quick Guide

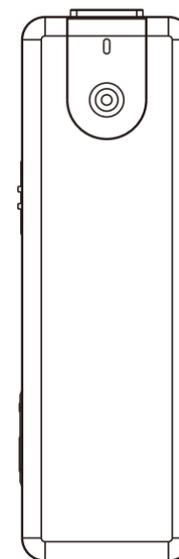

LawMate, innovation never stops

LawMate[®]