

Aqua-Protac Error Codes Definitions

ERROR CODE	MODE	DESCRIPTION	SHOWN ON SCREEN
ID0	SLEEP	The system has warned the user to change the bladder.	Warning : RPSM needs to be replaced
ID1	GENERAL	The measured pressure is higher than the vacuum limit pressure.	Error : RPSM does not deflate. Maintenance Required
ID6	GENERAL	The bladder did not reach its maximum pressure within the specified time.	Error : RPSM swelling failure
ID7	GENERAL	The bladder inflated for more than 1 min and did not reach its minimum pressure.	Error : RPSM swelling failure
ID8	ALERT MODE	The bladder's pressure has dropped below the minimum specified for backflow. The pump inflates it to its maximum pressure.	Warning : Automatic swelling
ID9	ALERT MODE	The pressure of the bladder fell below its minimum before 10min. The problem is stored in memory and waits for the end of the ALERT MODE.	Error : Air circuit leakage
ID16	FULL SYSTEM TEST	The bladder pressure dropped below the limit pressure in less than 10min. The system enters TROUBLE MODE.	Error : Full system test. Maintenance Required
ID20	PARTIAL TEST	The specified pressure was not reached within the specified time.	Error : RPSM Swelling. Maintenance Required
ID21	PARTIAL TEST	The internal pressure of the bladder fell below the limit pressure within the required time.	Error : RPSM Leaking. Maintenance Required
ID53	GENERAL	The bladder has reached the maximum of allowed inflations	Warning : RPSM replacement required (number of inflation)
ID54	GENERAL	The bladder has reached the maximum inflated time allowed.	Warning : RPSM replacement required (Swelling time)
ID58	SLEEP	The bladder has reached the warranty expiry date.	Warning : RPSM replacement required (Expiry Date)
ID59		The battery is disconnected.	Warning : Disconnected battery
ID60		The internal resistance of the battery is too high, it is necessary to change the battery	Warning : Battery replacement required
ID63		Loss of mains power	Warning : Loww of power supply
ID66	FULL SYSTEM TEST AND PARTIAL TEST	The system has reached its target pressure immediately	Error : The pneumatic system is blocked
ID67	FULL SYSTEM TEST	The system has reached its target pressure too quickly	Error : RPSM may be improperly installed