


## How to manually inflate the bladder

### Button Chart

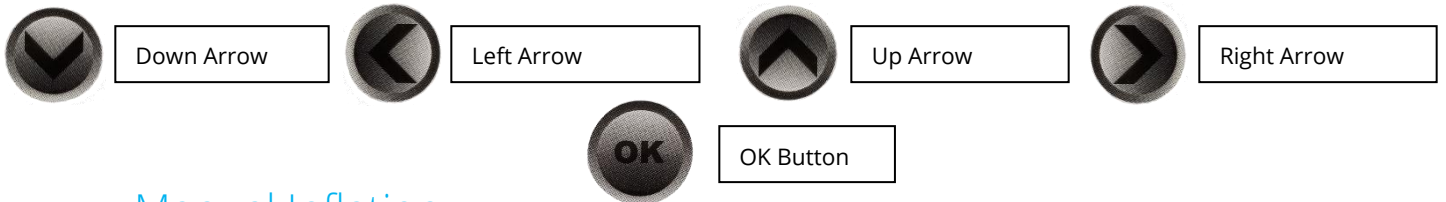

### Manual Inflation

**Please follow this procedure to manually inflate the bladder.**

**Once you want to deflate it, you will need to follow the "Manual deflation" procedure below**

#### Procedure

1. Press twice on the **checkmark / ok** button to access the main menu
2. Press on the **down arrow** until you see technician appear in the menu
3. Once you are aligned with "**Technician**", press on the **right arrow** to select it
4. Enter the password to access the technician menu
  - a. Password: **0084022**
5. Press on the **right arrow** to go to the technician menu
6. You should be aligned with "**Manual Control**". Press on the **right arrow**
7. You will be prompted by three options. Align the arrow with "**inflation**" then press the **right arrow**
8. The system will start the inflation of the bladder and will keep it inflated

### Manual Deflation

**Please follow this procedure to manually deflate the bladder and return it to automatic mode**

#### Procedure

1. Press twice on the **checkmark / ok** button to access the main menu
2. Press on the **down arrow** until you see technician appear in the menu
3. Once aligned with "**Technician**", press on the **right arrow** to select it
4. Enter the password to access the technician menu
  - a. Password: **0084022**
5. Press on the **right arrow** to go to the technician menu
6. You should be aligned with "**Manual Control**". Press on the **right arrow**
7. You will be prompted by three options. Align the arrow with "**deflation**" then press the **right arrow**
8. The system will start the deflation of the bladder.
9. Once the deflation is finished, you should be returned to the "**manual control**" menu
10. Align the arrow with "**Return to auto**" and press on the **right arrow**
11. Press on the **left arrow** to go back to the main menu
12. The system should say standby, sewer free and the green light should be on and solid.