



Infinity Canopy 400

PITCHING

- Unpack and lay canopy flat on ground.
- Locate inflating points at the base of each beam.
- Access the beams through the zipped entry points and through the side door.
- For the first use of the canopy, fully unscrew all valves from the AirBeams and screw back in carefully - this ensures that the valve is not cross-threaded.
- Remove smaller screw-cap on valve and insert largest pump nozzle of the Vango AirBeam™ pump supplied.
- Inflate all tubes to **7psi**. The tubes **MUST** be guided into an arch as they are inflated.
- Final tube pressure **MUST NOT** exceed 8psi.

DO NOT OVER-INFLATE BEAMS

- Remove pump & tighten screw-cap. Ensure both parts of valve are well fitted so it is air tight but do not over tighten.
- Position open end of canopy in approximately correct place.
- Secure in place by pegging top guyline into ground at side of tent.
- Peg out canopy base at contact point with tent and then front of canopy to tension material.
- Peg out ALL the guy lines, ensuring that they are in line with the beam or seam they are attached to and peg out ALL pegging points at base of canopy
- Re-position and adjust tensioning where necessary.

TO DEFLATE THE AIRBEAM CANOPY

- Unscrew the valve fully from the beam, taking care as the valve will be under pressure from the air inside the tube.

CORRECT AIRBEAM VALVE SETUP




Inflation



Deflation

CORRECT PUMP SETUP

Pump Body -> Pressure Valve -> Pressure Gauge -> Hose
(Ensure Valve/Gauge/Hose are connected to Inflation port of pump)

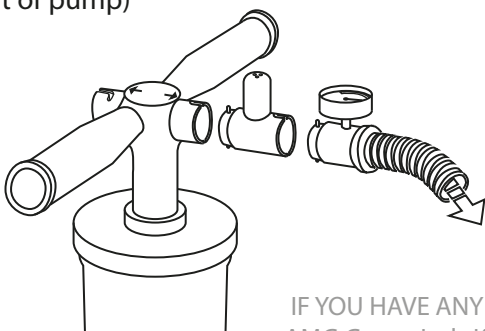

IN THE UNLIKELY EVENT OF A PUNCTURE

- Note: Most apparent punctures are a result of the valve not being screwed in correctly. Please check valves before changing AirBeam tube.
- Deflate the AirBeam. Unzip the internal flysheet sleeve which contains the affected beam.
- Remove the tube and its protective outer.
- The zips for the protective outer are cable tied together to prevent accidental access. Cut the cable tie and open the zip. **DO NOT** open these zips when tube is inflated.
- Remove the clear rubberised tube from the protective sleeve taking care when removing the valve from the sleeve.
- Partially inflate the tube and pass through a bucket or basin of water, looking for air bubbles. This will indicate location of puncture.
- Use the repair patch provided and cover hole, using instructions on patch. Re-insert tube into protective outer, closing zip from both ends, so that zip pullers are in the centre of the sleeve, and then replace into the flysheet sleeve (this may be easier with the tube partially inflated).

The Vango Infinity 400 Airbeam canopy is designed for use in lowland sheltered campsites. Do not pitch in high winds or exposed campsites.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535

E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.