



Pitching Instructions – Woburn 400 & 500 Front Canopy

Pitching Instructions

- Assemble the poles and insert into pole sleeves.
- Locate one end of the poles in Ring & Pin system as Figure 1 below.
- Push poles into an arch from opposite side and locate other pole end on to corresponding Ring & Pin system on flysheet.
- Tension the webbing strap at the pole end.
- Position the open end of canopy towards tent.
- Secure in position by clipping the canopy roof webbing straps onto the second tent pole sleeve.
- Peg out canopy base at contact point with tent and attach canopy rear side clips to front tent pole
- Peg out front of canopy.
- Secure in position by pegging out front guy lines.
- Peg out ALL remaining guylines and peg points as figure 2.

The Vango Woburn Canopy is designed for use in lowland sheltered campsites. Do not pitch in high winds or exposed campsites.



Figure 1.

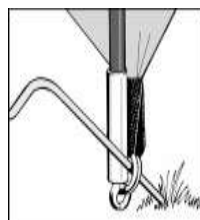


Figure 2.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER or
AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.
UK Consumer Hotline: 0844 811 0535 E-Mail: info@vango.co.uk
Calls to our Customer Hotline cost 5p per minute. Calls from mobile phones, cable networks or public payphones will generally cost more.