

# Chinook 200 & 300

## Pitching Instructions



### Flysheet First Pitching

1. Assemble the three poles and lay them on the ground.
2. Open flysheet on ground and position tent in desired direction.
3. Locate black flat external pole sleeves on outside of flysheet and insert poles. The pole sleeve ends are colour matched to the poles.
4. On one side, locate the ends of poles 1 and 2 into corresponding eyelets on pole anchor straps.
5. Push poles into an arch from opposite side and locate pole ends into corresponding eyelets.
6. Insert the ends of pole 3 into corresponding eyelets on pole anchor straps.
7. Tighten the pole anchor straps and attach the flysheet clips to the poles.
8. Peg out the tent at all 6 corners.
9. Peg down the remaining flysheet pegging points.
10. Peg out ALL guy lines using the Y alloy pegs.

The inner tent and flysheet can remain attached when pitching or packing. However, in humid or very wet weather, the underside of the flysheet may be coated with condensation. If this occurs, it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming wet.

### Inner Tent (if previously removed)

1. Open out inner tent inside the flysheet, and position doorways to correspond with the tent's porches.
2. Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
3. Suspend the inner by attaching its elastic loops to their corresponding clips on inside of flysheet.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER  
or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute.

Calls from mobile phones, cable networks or public payphones will generally cost more.