

Blade 100 & 200

Pitching Instructions



Inner First Pitching

1. Assemble the pole.
2. Open inner on ground and position in desired direction.
3. Locate pole sleeve on inner and insert pole.
4. Insert the end of pole into corresponding eyelet at rear of tent.
5. Push pole into an arch from front of tent and insert pole into corresponding eyelet on pole anchor strap.
6. Tighten the pole tension adjuster at front of tent.
7. Peg out the anchor straps at the ends of the pole.
8. Peg out the inner corners.

Flysheet

1. Open out flysheet and position so that doorway on inner and fly line up.
2. Attach the 2 velcro straps around the pole. 1, at the top of the door way, and 1 above the rear vent.
3. Connect the toggles on the sides of the inner tent to their corresponding tab on the inside of the flysheet.
4. Clip the buckles on the flysheet, into their corresponding buckles on the inner at the ends of the pole.
5. Tighten up the tension straps.
6. Place the elastic pegging points on flysheet around the pegs used for the inner tent corners. Replace pegs if nessecary to tension flysheet.
7. Peg out ALL guy lines.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER
or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute.

Calls from mobile phones, cable networks or public payphones will generally cost more.