

# Halo 200, 300 & 400

## Pitching Instructions




### Flysheets First Pitching

1. Assemble poles and lay them parallel on the ground. All three poles are the same length and diameter.
2. Open flysheet on ground and position tent in desired direction.
3. Locate pole sleeves on outside of flysheet and insert all poles.
4. Locate one end of each pole into corresponding eyelets on pole anchor straps. It is easier to start with the two parallel poles.
5. From the opposite side, push poles into an arch and locate pole ends into corresponding eyelets on pole anchor straps.
6. Tighten up both of the tension straps, located at the base of the poles.
7. Peg the tent at the base of each pole.
8. Peg out the porches by pulling them out and pegging through the adjustable webbing strap.
9. Attach flysheet clips to poles
10. Peg remaining flysheet pegging points.
11. Peg out ALL guy lines.

### Inner

1. Open out inner tent inside flysheet and position doorways to correspond with porch.
2. Starting from the top, suspend the inner by attaching elastic loops of inner tent with clips on inside of flysheet.
3. At each corner, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps.
4. Align the porch groundsheets and clip / peg into place, see diagram below for locations.

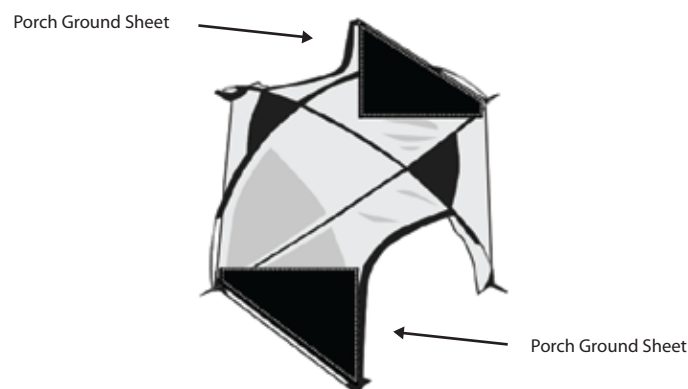

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER  
or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: [info@vango.co.uk](mailto:info@vango.co.uk)

Calls to our Customer Hotline cost 5p per minute.

Calls from mobile phones, cable networks or public payphones will generally cost more.