

Mirage 200 & 300

Pitching Instructions



Flysheet First Pitching

1. Assemble the three poles and lay them parallel on the ground. One pole will be shorter with a pre bend and the other two are straight. The middle sections of the poles are colour coded to link with a tab on the end of the pole sleeve.
2. Open the flysheet on the ground and position the tent in desired direction.
3. Locate pole sleeves on outside of flysheet and insert poles.
4. On one side, locate the end of each pole into corresponding eyelets on pole anchor straps.
5. On opposite side, push poles into an arch and locate pole ends into corresponding eyelets on pole anchor straps. Start with the two longer poles, then the shorter pole.
6. The tent will stand up by itself, which lets you finalise its position. Pitch the back of the tent into the wind for a stable tent, and sheltered entrance.
7. Peg out the 6 anchor straps where the poles insert into the eyelets, keeping the flysheet taut.
8. Pull out the front door and peg out the adjustable anchor strap.
9. Peg out ALL guy lines.
10. When the front guy line is pegged out, you can choose to have either side of the front door open, or open both zips and roll up the door into the net pocket under the front guyline.
11. Attach the inner tent using instructions on right.
12. Lay out the porch groundsheet in correct direction. Connect the plastic hooks at rear corners to the metal rings at pole base; then loop the front elastic around the front pegging point.

Inner

1. To attach, open out inner tent inside flysheet and position it so the doorway on inner and fly line up.
2. Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps. Suspend the inner by attaching elastic loops of inner tent with clips on inside of flysheet.

IF YOU HAVE ANY PROBLEMS PLEASE CONTACT YOUR LOCAL RETAILER
or

AMG Group Ltd., Kelburn Business Park, Port Glasgow, Scotland. PA14 6TD.

UK Consumer Hotline: 0844 811 0535

E-Mail: info@vango.co.uk

Calls to our Customer Hotline cost 5p per minute.

Calls from mobile phones, cable networks or public payphones will generally cost more.