


Pop-Up Pitching

- Remove tent from the bag and carefully remove the attached elastic strap. (BEFORE REMOVING THE STRAP REMEMBER HOW THE TENT NATURALLY OPENS, AS YOU WILL HAVE TO PACK IT IN REVERSE LATER...SEE BELOW)
- The tent will now be free to pop open.
- Position the tent in the required direction and peg out the corners of the flysheet so that the groundsheet is taut.


1

LEAVE DOOR OPEN
GATHER BOTH
TOP ENDS
TOGETHER

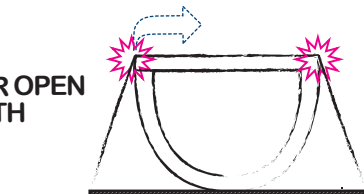


& TURN ON SIDE.
YOU SHOULD
HAVE A 'C' SHAPE

GRAB PIONT

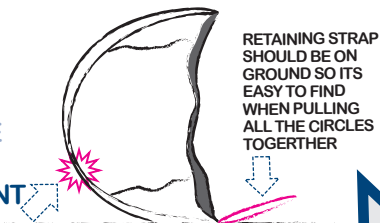


2

PUSHING THE END POINT OF 'T'
PUSH DOWN AND TO THE MIDDLE (M)

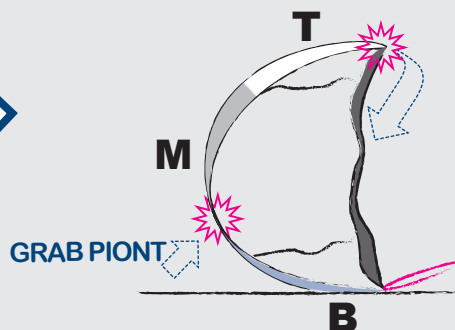


3

PUSHING THE END POINT OF 'T'
THE TENT WILL NATURALLY TWIST
FORMING 3 CIRCLES... T, M & B..

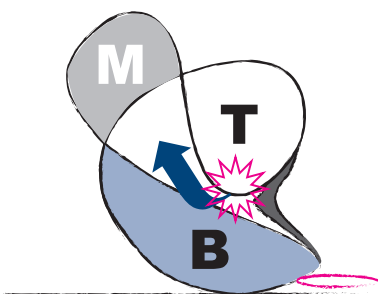


4

SEEING THE THREE CIRCLES
PUSH ALL 3 DOWN WITHIN
EACH OTHER TO FORM
ONE CIRCLE...

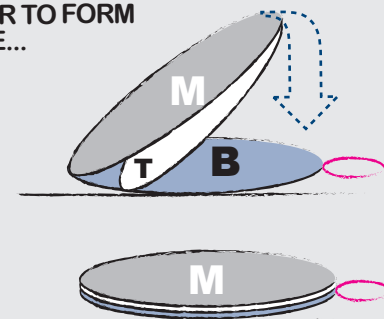


5

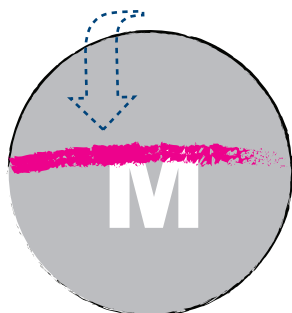

SECURE STRAP
HOLDING ALL THREE TOGETHER

6

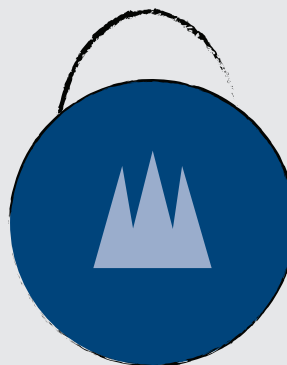

& PACK