



## Pitching Instructions – Lantic 6



### FLYSHEET FIRST PITCHING

- Assemble the 4 poles (2 long dome poles, 1 medium bedroom pole, and 1 shorter bedroom pole) and lay them parallel on the ground. Open out flysheet and position in required direction.
- Insert the poles through the pole sleeves on the outside of the flysheet.
- Locate one end of each pole on one side of flysheet, into the metal pin system at the end of the pole sleeves. Make sure poles locate into correct pin system (all poles follow corresponding flysheet seams to pin system). Loosen any tensions straps on the pin system
- Push poles into an arch from opposite ends and locate pole ends into corresponding metal pin. Tighten the tension straps at the pole bases.
- Start pegging out the main corners at one end of the tent using the V pegs.
- Pull the tent forward until taut and peg out the main corners at the other end of the tent, again with the V pegs.
- Ensure the tent is in a straight line. The groundsheet should be flat and wrinkle free.
- Attach all flysheet pole clips onto poles.
- Secure the tent using the pin pegs through the ring & pin system – see diagram below.
- Peg out ALL guy lines, ensuring that they are in line with the pole or seam they are attached to.

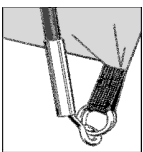


Figure 1.

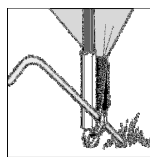


Figure 2.

#### **Ring and Pin System.**

1. Locate one end of each pole onto the corresponding metal pin. The metal pin inserts into the hollow metal ferrule on the end of each pole. **(See Figure 1)**. Push the pole into a curve from the opposite side, one at a time, and locate all pole ends onto the metal pins.
2. Peg the corners of the tent through the metal rings using pin-pegs. It is important to drive the peg into the ground at a 45 degree angle to obtain the best grip. **(See Figure 2)**.

### INNER TENT

- Open out inner tent inside flysheet and position doorway to correspond with the porch entrance of the flysheet.
- Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet through shockcord pegging points on the base of the flysheet.
- Suspend the inner by attaching hooks of inner tent with rings on inside of flysheet.
- Attach elasticated hooks on front of groundsheet through shockcord pegging points on base of flysheet.
- Open flysheet door and peg out porch groundsheet.

### COMBINED PITCHING

- The inner can remain attached to the flysheet when packing tent after use, but always check that toggles and clips are still attached when re-pitching.
- If pitching with inner and flysheet combined it is advisable to obtain assistance to avoid undue strain on poles and tent material.
- In humid or very wet weather it may be advisable to detach the inner and pack it separately to avoid the inner tent becoming saturated.