

Not charging

Does the battery indicator flash on the dash display? When the engine is running do you see an increase in the voltage on the battery?

Yes

Change the dash display

No

Check the continuity from the pink wire to the battery. Do you have continuity?

No

Have you changed the starter solenoid?

Yes

Is the pink wire connected on the solenoid with the battery lead?

Yes

Change Battery

No

Connect the pink wire to the battery lead on the solenoid.

Yes

Check all earth points on the unit, are they clean? Is the earth lead on the voltage regulator attached to the starter motor?

No

Connect earth lead from regulator to the starter motor.

If the above trouble shooting has not resolved the issue then please call Technical Services on 01844 278800