

5 amp fuse blowing

Disconnect the display board
– does the fuse blow?

Yes

No

Remove cutter deck and check the wiring
near to the PTO tensioner – is the
tensioner fouling the wiring loom?

Change board

Yes

No

Repair loom, and cable tie
out of the way

Disconnect the pink wire from
the engine regulator – does
the fuse still blow?

Yes

No

Disconnect the engine wires on the
loom – they are red and black and
purple and black. Does it still blow?

Change Regulator

Yes

No

Check battery has been
connected correctly – red to
positive and black to
negative. Change relays 4
and 5.

Remove the engine cover and check the
wiring to ensure the fly wheel hasn't cut
through and it's earthing against the engine.
Repair loom if needed.

If the above trouble shooting has not resolved the issue then please call Technical
Services on 01844 278800