

Deck not engaging

Have you got RPM being displayed?

Yes

No

Does the cutter deck symbol display on the dash?

Check the engine wires are connected and the fuse is ok.

Yes

No

Check connections on the sub loom and the connection in to the clutch, Change sub loom. Check fuse no.1 (7.5 amp)

Check Seat safety switch, place a loop in the wiring to eliminate the switch. Does the deck operate?

No

Yes

For Units built after October 2014, disconnect the ROM switch down by the forward and reverse pedals. Does the deck work?

Change safety switch in the seat.

Yes

No

Adjust bracket or change the safety switch

Check Relays; refer to the wiring diagram for relay numbers

If the above trouble shooting has not resolved the issue then please call Technical Services on 01844 278800