

If you open the control box where the circuit board is located, there is a small potentiometer called POT1 on the bottom right side of the circuit board, you can turn this dial clockwise or counter clock wise to calibrate the transducers sensors. You might be able to get those numbers closer to each other but adjusting POT1 on the circuit board. If you can't adjust the numbers there might be a problem with the transducer sensors or the cable harness.

POT1 is circled below for your reference:

