


HOW TO CONNECT & CONFIGURE AN AIRMASTER Q1 CONTROLLER FOR METACENTRE MASTER CONTROL

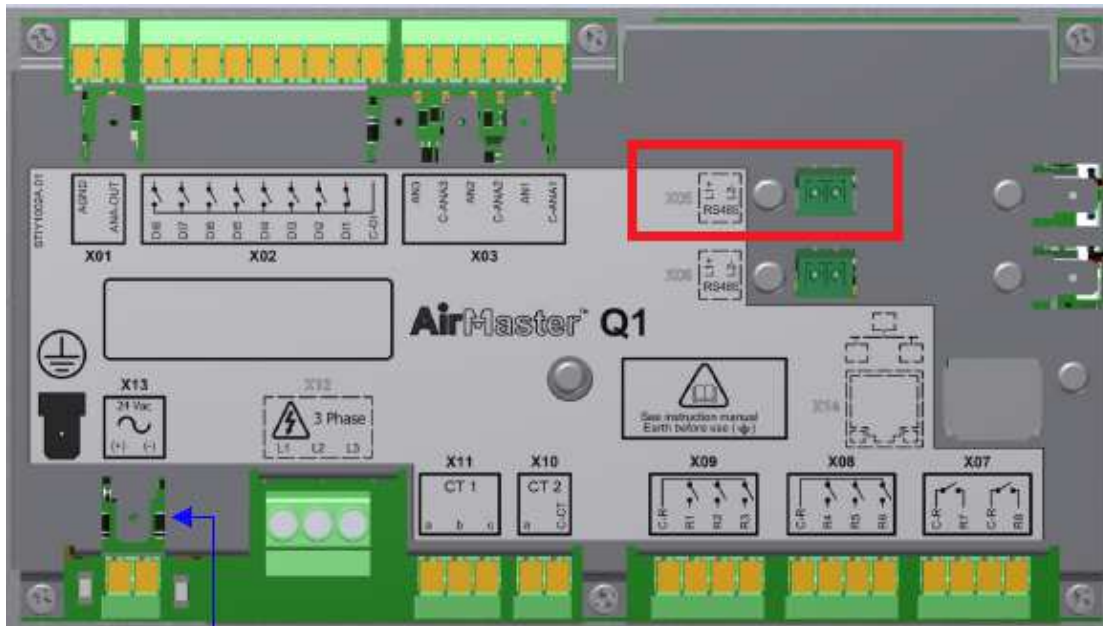

Connect Airbus485 network to connector X05 on the Airmaster Q1
Ensure to respect wire polarity!
In case the (optional) connector X05 is not available on your Q1 controller,
connect the Airbus485 to connector X04 (located at the right hand side of
the Q1 controller, not shown on the above picture).

Q1 CONFIGURATION (If connected to X05)

Go to Menu P09 Item P09.02 ADMIN user
Press ENTER and enter admin access code 2308
The active user is now the ADMIN user

*Default admin code is 2308. This code is editable.
If code 2308 doesn't give you access to Menu P10, please contact your compressor
equipment manufacturer for the appropriate access code.*

Go to Menu P10 Item P10.10 RS485 X05 CONFIG
Set Item P10.10.01 RS485 X05 CONFIG to Airbus485™
Set Item P10.10.02 to the correct Airbus485 Slave Address

Go to Menu P10 Item P10.13 and set Item P10.13 Load source to
'Communications'

Return to Home Screen (Menu P00) and press Start

Q1 CONFIGURATION (If connected to X04)

Go to Menu P09 Item P09.02 ADMIN user
Press ENTER and enter admin access code 2308
The active user is now the ADMIN user

*Default admin code is 2308. This code is editable.
If code 2308 doesn't give you access to Menu P10, please contact your compressor
equipment manufacturer for the appropriate access code.*

Go to Menu P10 Item P10.09 RS485 X04 CONFIG
Set Item P10.09.01 RS485 X04 CONFIG to Airbus485™
Set Item P10.09.02 to the correct Airbus485 Slave Address

Go to Menu P10 Item P10.13 and set Item P10.13 Load source to
'Communications'

Return to Home Screen (Menu P00) and press Start

