





 


 
 
 


Quick Tip:

When battery runs out, PixelWhip will blink red 3 times to indicate low power, then power off.

STYLE 1

SINGLE COLORS

- Pattern Channel 1  **Red**
- Pattern Channel 2  **Orange**
- Pattern Channel 3  **Yellow**
- Pattern Channel 4  **Green**
- Pattern Channel 5  **Cyan**
- Pattern Channel 6  **Sky Blue**
- Pattern Channel 7  **Blue**
- Pattern Channel 8  **Purple**
- Pattern Channel 9  **Magenta**
- Pattern Channel 10  **White**



Turn On: Long-press for 1 second




 


 
 
 
 
Change Style: Long-press for 1 second

Change Channel: Short-press

Turn Off: Long-press for 2 seconds

STYLE 2

COLOR WIPES

- Pattern Channel 1  **Magenta/Red Wipe**
- Pattern Channel 2  **Yellow/Red Wipe**
- Pattern Channel 3  **Yellow/Green Wipe**
- Pattern Channel 4  **Green/Blue Wipe**
- Pattern Channel 5  **Cyan/Magenta Wipe**
- Pattern Channel 6  **White/Blue Wipe**
- Pattern Channel 7  **Blue/Magenta Wipe**
- Pattern Channel 8  **Purple/Yellow Wipe**
- Pattern Channel 9  **Watermelon Wipe**
- Pattern Channel 10  **Rainbow Wipe**