

Component	Requirements																				
Development Environment	<b>Operating System</b>																				
	<table border="1"> <thead> <tr> <th data-bbox="443 237 662 260">Machine Edition Product</th> <th data-bbox="837 237 948 260">Windows 7<sup>a</sup></th> <th data-bbox="1000 237 1122 260">Windows XP<sup>b</sup></th> </tr> </thead> <tbody> <tr> <td data-bbox="443 264 618 369">           Logic Developer - PLC            View            Logic Developer - PC            Logic Developer - State            Motion Developer         </td> <td></td> <td></td> </tr> </tbody> </table> <p data-bbox="431 380 475 396"><b>Notes</b></p> <p data-bbox="451 407 1214 426">a. 32-bit or 64-bit variations of the following: Windows 7 Ultimate, Windows 7 Enterprise, or Windows 7 Professional.</p> <p data-bbox="480 428 1471 632"><b>Important:</b> The 64-bit variations of Windows 7 do not support the property column display in the Variables tab of the Navigator. To use Machine Edition on Windows 7, you must be part of the Administrators group. For more cautions and limitations when using Machine Edition on Windows 7, select Machine Edition in the Product field above, and click the Release Notes tab.</p> <p data-bbox="451 642 1276 676">b. <b>Supported:</b> Windows XP Professional SP2 and SP3. You must be part of the PowerUsers group or the Administrators group.  <b>Not supported:</b> Windows XP Tablet PC Edition and Windows XP Embedded.</p> <p data-bbox="451 684 797 701">c. Windows regional settings must be set to English.</p> <p data-bbox="383 722 656 743"><b>Processor speed and memory</b></p> <ul data-bbox="412 768 932 816" style="list-style-type: none"> <li>■ Minimum: Intel Core Duo or AMD Athlon 64 X2 with 4 GB RAM</li> <li>■ Recommended: 2.6 GHz Intel Core i series with 4 GB RAM</li> </ul> <p data-bbox="383 840 1052 861"><b>Extra requirements when executing multiple instances of Machine Edition</b></p> <p data-bbox="383 884 467 903">Click <a href="#">here</a>.</p> <p data-bbox="383 926 561 947"><b>Other requirements</b></p> <ul data-bbox="412 970 1438 1123" style="list-style-type: none"> <li>■ Internet Explorer 9.0, 8.0, 7.0, 6.0 SP1 or later, or 5.5 with SP2 Q810847 or later.  <b>Note:</b> You must install Internet Explorer before installing Machine Edition.</li> <li>■ TCP/IP Network protocol-based computer (if you use an Ethernet connection).</li> <li>■ .NET Framework 4.0 Client Profile. If the Microsoft .NET Framework is not yet installed, it is automatically included during the installation of Machine Edition and may require a reboot to complete the installation.</li> <li>■ 2 GB of hard disk space. Additional space is required for your projects and temporary files.</li> </ul> <p data-bbox="383 1146 1154 1165">The Development Environment is supported on VMware with the following VMware requirement:</p> <ul data-bbox="412 1188 716 1293" style="list-style-type: none"> <li>■ VMware Player 2.0 or greater</li> <li>- or -</li> <li>■ VMware Workstation 6.0 or greater</li> </ul> <p data-bbox="383 1297 1105 1316"><b>Note:</b> The APM Motion Programmer does not function if Proficy Machine Edition is executed from within VMware.</p>	Machine Edition Product	Windows 7 <sup>a</sup>	Windows XP <sup>b</sup>	Logic Developer - PLC View Logic Developer - PC Logic Developer - State Motion Developer																
Machine Edition Product	Windows 7 <sup>a</sup>	Windows XP <sup>b</sup>																			
Logic Developer - PLC View Logic Developer - PC Logic Developer - State Motion Developer																					
<b>Windows PC Runtime</b>	<ul data-bbox="412 1329 1463 1419" style="list-style-type: none"> <li>■ When you install only View Runtime or Control Runtime from the DVD, the Runtime executables are automatically updated from the development computer when the project is downloaded.</li> <li>■ Windows 7 Ultimate, Windows 7 Enterprise, Windows 7 Professional, Windows XP Professional SP2 and SP3, or Windows XP Embedded</li> </ul> <p data-bbox="431 1423 475 1440"><b>Notes</b></p> <ul data-bbox="461 1455 954 1539" style="list-style-type: none"> <li>■ The above versions of Windows 7 are supported in both 32-bit and 64-bit.</li> <li>■ Windows regional settings must be set to English.</li> <li>■ Windows XP Tablet PC Edition is not supported.</li> </ul> <ul data-bbox="412 1551 992 1656" style="list-style-type: none"> <li>■ 233 MHz Pentium-based workstation (1.6 GHz recommended)  <b>Note:</b> 300 MHz is required for Windows XP Professional.</li> <li>■ 200 MB free hard disk space</li> <li>■ 128 MB RAM (1 GB recommended; minimum 256 MB on Windows XP)</li> </ul> <p data-bbox="431 1680 1360 1698">The following table describes the minimum requirements needed for the range of variables defined in your projects.</p> <table border="1" data-bbox="662 1717 1195 1833"> <thead> <tr> <th data-bbox="662 1717 808 1745">Requirements</th> <th colspan="3" data-bbox="959 1717 1045 1745">Variables</th> </tr> <tr> <td></td> <td data-bbox="824 1745 932 1766">&lt; 500</td> <td data-bbox="932 1745 1068 1766">500 - 10000</td> <td data-bbox="1068 1745 1195 1766">&gt; 10000</td> </tr> </thead> <tbody> <tr> <td data-bbox="662 1766 808 1787">CPU</td> <td data-bbox="824 1766 932 1787">233 MHz</td> <td data-bbox="932 1766 1068 1787">1 GHz</td> <td data-bbox="1068 1766 1195 1787">2 GHz</td> </tr> <tr> <td data-bbox="662 1787 808 1808">Disk Space</td> <td data-bbox="824 1787 932 1808">200 MB</td> <td data-bbox="932 1787 1068 1808">200 MB</td> <td data-bbox="1068 1787 1195 1808">200 MB</td> </tr> <tr> <td data-bbox="662 1808 808 1833">RAM</td> <td data-bbox="824 1808 932 1833">128 MB</td> <td data-bbox="932 1808 1068 1833">512 MB</td> <td data-bbox="1068 1808 1195 1833">1 GB</td> </tr> </tbody> </table>	Requirements	Variables				< 500	500 - 10000	> 10000	CPU	233 MHz	1 GHz	2 GHz	Disk Space	200 MB	200 MB	200 MB	RAM	128 MB	512 MB	1 GB
Requirements	Variables																				
	< 500	500 - 10000	> 10000																		
CPU	233 MHz	1 GHz	2 GHz																		
Disk Space	200 MB	200 MB	200 MB																		
RAM	128 MB	512 MB	1 GB																		
<b>QuickPanel+ Runtime</b>	<ul data-bbox="412 1875 792 1927" style="list-style-type: none"> <li>■ For Logic and HMI components: QuickPanel+</li> <li>■ For HMI only: QuickPanel+</li> </ul>																				

**QuickPanel View/Control  
Runtime**

- For HMI and Logic components: QuickPanel Control
  - For HMI only: QuickPanel View
- 

