

PAC System Requirements

Machine Edition 9.80

Contents

Section 1: PAC Machine Edition 9.80.....	1
1.1 Operating System	1
1.2 Windows Administrator Settings.....	1
1.3 Processor Speed and Memory	2
1.4 Miscellaneous Requirements	2
Section 2: View & Control Runtime (Windows PC) 9.80	3
2.1 Operating System	3
Section 3: PAC Productivity Suite 3.80	4
3.1 System Components.....	4
3.2 System Level Operating System	4
Section 4: PAC Change Management 9.80	5
4.1 Operating System	5
4.2 Processor Speed and Memory	5
4.3 Miscellaneous Requirements	6
4.4 Subversion Repository	7
4.4.1 Example SVN Installation	7
4.5 Supported Product Modules	9
4.5.1 Project Type Modules	9
4.5.2 Thin Client Modules	10
4.5.3 As-is Project Type Modules	10
General Contact Information	11
Technical Support.....	11

Section 1: PAC Machine Edition 9.80

1.1 Operating System

Machine Edition Product	Windows 7 ^{SP1}	Windows 8 and 8.1	Windows 10
Logic Developer – PLC	√	√	√
QP+ View Developer	√		√
QP+ Logic Developer – PC	√		√

Notes

- Windows regional settings must be set to English.
- 32-bit & 64-bit variations of Windows are supported (64-Bit recommended).
- It is a good security practice to always run software that has had security patches and other operating system support fixes provided by Microsoft and applied by the owner/operator as part of a cyber maintenance program.
- It is recommended to apply security patches and other operating system support fixes before installing.
- When using PROFINET, a 64-bit Operating System is highly recommended.

1.2 Windows Administrator Settings

Some features of PAC Machine Edition are not supported when running without elevated access.

When using the following features, you can lower your User Account Control settings and/or set up PAC Machine Edition Engineering to always "Run As Administrator":

- View and Logic Runtimes
- EGD Management Tool
- PROFINET DCP Tool
- PAC8000 I/O Configuration Tool
- Serial PLC Communications
- Creating Custom Project Templates
- IEC 61850 Configurator

1.3 Processor Speed and Memory

- Minimum (for small to medium-sized projects):
 - Intel Core i5 with 4 GB RAM
 - AMD FX or Phenom II X6 with 4 GB RAM
- Strongly recommended for large projects or when using multi-instance:
 - Intel quad-core Core i7 with 8 GB RAM and 64-bit Windows
 - AMD higher FX or Phenom II X6 models with 8 GB RAM and 64-bit Windows

Notes

- When using multiple instances, each instance will consume the resources required for a single instance. Running too many instances may cause your system to become unstable. You can run more instances with small projects than with medium or large projects. In general, more than 5 instances of small projects, 3 instances of medium projects or 2 instances of a large project will likely impact performance on most systems.
- A large project is one that exceeds 125,000 variables, 128 blocks, 10 targets, or combinations of each that would exceed these values.

1.4 Miscellaneous Requirements

- Internet Explorer Version: 11.0 or newer with current updates.
 - Note:** Install Internet Explorer before installing Machine Edition.
- TCP/IP Network protocol-based computer (if you use an Ethernet connection).
- .NET Framework 4.8 Full. If the Microsoft .NET Framework is not yet installed, it is automatically included during the installation of Machine Edition and may require a reboot to complete the installation. This installation requires a minimum of Windows 7 SP1.
- 2 GB of hard disk space. Additional space is required for your projects and temporary files.
- The Development Environment is supported on VMware Player or VMware Workstation

Section 2: View & Control Runtime (Windows PC) 9.80

When you install only View Runtime or Control Runtime from the DVD, the Runtime executables are automatically updated from the development computer when the project is downloaded.

2.1 Operating System

Machine Edition Product	Windows 7 ^{SP1}	Windows 8 and 8.1	Windows 10
QP+ View Developer	√	-	√
QP+ Logic Developer – PC	√	-	√

- Windows 7 Ultimate, Windows 7 Enterprise, Windows 7 Professional and Windows 10.

Notes

- The above versions of Windows are supported in both 32-bit and 64-bit.
- Windows regional settings must be set to English.

Important: Windows 8 and 8.1 does not support View Runtime or Control Runtime

- 233 MHz Pentium-based workstation (1.6 GHz recommended)
- 200 MB free hard disk space
- 128 MB RAM (1 GB recommended)

The following table describes the minimum requirements needed for the range of variables defined in your projects.

Requirements	Variables		
	< 500	500 - 10000	> 10000
CPU	233 MHz	1 GHz	2 GHz
Disk Space	200 MB	200 MB	200 MB
RAM	128 MB	512 MB	1 GB

Section 3: PAC Productivity Suite 3.80

Some components of the PAC Productivity Suite products may (or may not) be supported on alternate operating systems. For detailed information, refer to the product's installation guide for more information.

3.1 System Components

PAC Productivity Suite is made up of several products, more details are available within the documentation of those products.

Product	Version	Engineering Workstation	Operator Console	Application Server	System Server
PME (LD PLC)	9.80	√			
HMI (SIMPLICITY)	10.0	√	√	√	
EGD Driver	7.40k	√	√	√	√
EGD Tools	6.01	√	√	√	√

3.2 System Level Operating System

PPS Product	Windows 7	Windows 10
Engineering Workstation	√	√
Operator Console	√	√
Application Server	√	√
System Server	√	√

Section 4: PAC Change Management 9.80

4.1 Operating System

Change Management Component	Windows 7	Windows 10	Server 2008 SP2	Server 2008 R2	Server 2012	Server 2012 R2	Server 2016
Server	√	√	√	√	√	√	√
Thick Client	√	√	√	√	√	√	√
Scheduler Engine	√	√	√	√	√	√	√
Thin Client	√	√	√	√	√	√	√

Notes

- Windows regional settings must be set to English.
- The above Windows are supported in both 32-bit and 64-bit.
- The PCM Server and Thick Client are not supported in environments that use Microsoft Terminal Services or Microsoft Cluster Server. The PCM Thin Client is supported in environments that use Microsoft Terminal Services.
- To connect to the PCM server in a 64-bit environment, you will need to enter the PCM server IP address and name in the hosts file.
- If you install the PCM Server on Windows Server 2012 R2, Windows Server 2016, or Windows 10, after the installation you may need to run the following command line once to make the PCM Server service appear in the Registry and the Services list properly:

```
"C:\Program Files (x86)\Emerson\PAC Machine Edition\fxManager\Server\fxServer.exe" -service
```

4.2 Processor Speed and Memory

For the PCM Server, Thick Client, and Scheduler Engine:

Minimum (for small to medium-sized projects):

- Intel Core i5 with 4 GB RAM
- AMD FX or Phenom II X6 with 4 GB RAM

Strongly recommended for large projects:

- Intel quad-core Core i7 with 8 GB RAM and 64-bit Windows
- AMD higher FX or Phenom II X6 models with 8 GB RAM and 64-bit Windows

Note: See your sales representative for server system recommendations based on your projected number of PCM Clients and the projected size of your project database.

For the PCM Thin Client, including the Scheduler and Scheduler Editor used with the Thin Client:

- 1.5 GHz Pentium-based computer recommended
- 512 MB RAM (1 GB recommended)

4.3 Miscellaneous Requirements

- Internet Explorer Version: 11.0, 10.0, 9.0, 8.0, or 7.0, with current updates.
 - **Note:** Install Internet Explorer before installing Change Management.
- Ethernet Network Adapter and the TCP/IP Network Protocol (100 Mbit).
- .NET Framework 4.8 Full for the PCM Server, Thick Client, and Scheduler Engine. If the Microsoft .NET Framework is not yet installed, it is automatically included during the installation of Change Management and may require a reboot to complete the installation.
- PCM Thick Client for the PCM Scheduler Engine.
- Free hard disk space:
 - 20 GB, plus storage space for project files, for the PCM Server.
 - 50 MB, plus storage space for project files, for the PCM Thick or Thin Client (500 MB recommended to start with).
 - 50 MB (in addition to hard disk space required for the PCM Thick Client) for the PCM Scheduler Engine.
- One of the following version control systems (VCS) for the PCM Server:
 - Apache Subversion version 1.8.3 (or greater). For more details, visit Apache's web site at <http://subversion.apache.org/packages.html> and download any binary installer package for Windows 32-bit that is based on version 1.8.3 (or greater).

Notes:

You can choose to download and compile the source files rather than downloading the binary installer files. For more details, visit Apache's web site at <http://subversion.apache.org/download/>.

- Subversion with PAC Change Management is supported only on Windows operating systems.
- Only 32-bit Subversion is supported or compatible in PAC Change Management.
- Microsoft Visual SourceSafe 6.0d Build 31222 or later (Server installation), or Visual SourceSafe 2005.

Notes

- The 6.0d version can be acquired by installing the Microsoft Visual Studio 6 SP6 update. For more details, visit Microsoft's web site at www.microsoft.com.
- If Visual SourceSafe 6.0 is installed and you want to upgrade to Visual SourceSafe 2005, you must first uninstall PAC Machine Edition, **restart your computer to avoid potential operating system corruption**, and then uninstall Visual SourceSafe 6.0. You can then install Visual SourceSafe 2005, and then reinstall Machine Edition. Uninstalling only Visual SourceSafe 6.0 does not remove it from the computer because Machine Edition retains a copy.

4.4 Subversion Repository

- The migration of PAC Change Management Visual SourceSafe (VSS) repository data to Subversion is NOT supported. If you want to migrate your data and retain the revision/history information, please contact Emerson.
- Microsoft retired Visual SourceSafe from mainstream support on July 10, 2012 with extended support ending on July 11, 2017. If you are currently using VSS, you can continue to do so, and can use this DVD to install the latest SIMs for PAC Change Management. Support of Subversion (SVN) as a repository is new to this version of PAC Change Management. Below is a set of steps detailing a sample install and setup of SVN as the PAC Change Management repository.

4.4.1 Example SVN Installation

The following procedure outlines the steps required to implement SVN as the PAC Change Management repository. SVN is the Apache Subversion package for Windows. This procedure is a guideline for demonstration purposes only and may differ from the steps required when using other server packages.

Install 32-bit SVN version 1.8.3 (or greater).

NOTE: The *svnadmin* and *svnserve* utilities are required.

1. Install the PAC Change Management Server with SVN as your repository. For more information, see "To install the PAC Change Management Server" in the Getting Started Guide.
2. Create a new SVN repository by opening a Windows command prompt, and then

running `svnadmin create [chosen path]`; where [chosen path] is the location of the SVN repository. We recommend:

```
C:\Program Files (x86)\Emerson\PAC Machine  
Edition\fxManager\Server\SVN.
```

NOTE: When you try to use an MS-DOS command that contains a path statement, you may receive an error message if you use a path statement that contains spaces. To resolve this issue, place quotation marks around each path parameter that contains a space. For example, `svnadmin create "c:\Program Files (x86)\TestDirectory"`.

1. Perform the following steps to configure the newly created SVN repository. For example, please see the `Example_Config_SVN.zip` file.
 - a. Configure the `authz` file to add a user account with the following entry:

```
fxMgrServer = rw. This file is located in the C:\Program Files
(x86)\Emerson\PAC Machine Edition\fxManager\Server\SVN\conf folder.
```

Note: Make sure that the `conf` folder has read/write privileges. Also, be sure to include the `[/]` syntax to designate a new section.
 - b. Configure the `passwd` file to add a password for the account you just created with the entry, `fxMgrServer = fxMgr`. This file is located in the `C:\Program Files (x86)\Emerson\PAC Machine Edition\fxManager\Server\SVN\conf` folder.
 - c. To set the SVN system location for username and password information, configure the `svnserve.conf` file to specify the location of the authorization and password files. The `svnserve.conf` file is located in the `C:\Program Files (x86)\Emerson\PAC Machine Edition\fxManager\Server\SVN\conf` folder. Under the `[general]` section, remove the comments marker from the following lines:

```
anon-access = none
password-db = passwd
authz-db = authz
```
 - d. Create a batch file named `pre-revprop-change.bat` containing the text `exit 0`, and then add the batch file to the `C:\Program Files (x86)\Emerson\PAC Machine Edition\fxManager\Server\SVN\hooks` folder.
2. In the Windows command prompt, create a Windows service for `svnserve` with the following command line:

```
sc create SVNSERVE binPath= "\"C:\Program Files
(x86)\Subversion\bin\svnserve.exe\" --service --listen-port 9999 --
compression 0 --memory-cache-size 1024 --cache-txdeltas yes -r

\"C:\Program Files (x86)\Emerson\PAC Machine
Edition\fxManager\Server\" start= auto DisplayName= "SVNServer
Service"
```

Notes:

 - This path depends on where Subversion was installed.
 - The escaped `*` characters found in the command line are required to delimit the path as a parameter to the `svnserve` tool and `svnserve` itself. If you copy and paste this command line to the Windows command prompt, you may need to change the `"` characters to real double quotes if they are curled quotes in these instructions.
3. Run the PAC Change Management `ServerConfig.exe` file, which is located in the `C:\Program Files (x86)\Emerson\PAC Machine Edition\fxManager\Server` folder, and then confirm or configure the following information.
 - a. In the **Server Description** field, enter the hostname of the computer.
 - b. In the **User Name** field, confirm or enter `fxMgrServer`.
 - c. In the **Password** field, confirm or enter `fxMgr`.

NOTE: The user name and password can be changed in the SVN repository. They are located in the `conf/authz` and `conf/passwd` files.

- d. In the **SVN Repository** field, enter `svn://<servername>:9999`, where `<servername>` is the name of the server.

IMPORTANT: Make sure that the `<servername>` is lower case.

- e. In the **Root Project** field, enter `/SVN`. (This is the last directory of the chosen path in step 3.)
- f. In the **Working Folder** field, select `c:\`. The working directory will be `c:\FX`. If this directory already exists, remove it first.

4. Configure the PAC Change Management Server service to depend on the SVN Server service, in addition to the standard RPCSS service using the following command.

```
sc config fxServer depend= RPCSS/SVNSERVE
```

4.5 Supported Product Modules

Below is a list of custom project support modules included on the Change Management installation DVD. A custom project module is a group of configuration files and scripts that let you manage projects of that project type on a Change Management system.

You must select the desired modules when you install the Change Management Server/Client system. You may also have to update certain files based on the configuration of your system and network.

4.5.1 Project Type Modules

- **CIMPLICITY:** Version 7.0 or higher.
- **Engineering Workstation:** Version 6.0 or greater.
- **Proficy iFIX:** iFIX 5.1, 5.5, or 5.8.
- **LM9030:** LogicMaster90-30 projects, version 9.05.
- **LM9070:** LogicMaster90-70 projects, version 7.05.
- **Machine Edition:** Version 5.9 or greater.
- **Microsoft Excel:** Microsoft Excel™ *.XLS documents.
- **Microsoft Word:** Microsoft Word™ *.DOC documents.
- **RSLogix 5, 500, and 5000:** RSLogix 5 *.RSP files, RSLogix 500 *.RSS files (versions 7.10.00, 7.20.00, 7.30.00, and 8.10.00), or RSLogix 5000/Studio 5000 Logix Designer *.ACD files (version 15.01.00, 16.00.00, 18.00.00, 19.00.00, 21.00.00, 23.00.00, 24.00.00, 26.00.00, and 27.00.00). Change Management supports both the standard and professional versions of RSLogix software.
- **Siemens S7:** Versions 5.3x and 5.4 SP1 and 5.4 SP4.
- **Unity Pro XL:** Version 11.0 or greater.

4.5.2 Thin Client Modules

- **RSLogix 5, 500, and 5000:** RSLogix 5 *.RSP files, RSLogix 500 *.RSS files (versions 7.10.00, 7.20.00, 7.30.00, and 8.10.00), or RSLogix5000 *.ACD files (version 15.01.00, 16.00.00, and 18.00.00). Change Management supports both the standard and Professional versions of RSLogix software.
- **Siemens S7:** Versions 5.3x and 5.4 SP1 and 5.4 SP4.
- **Modicon ProWORX32:** Version 2.0.

4.5.3 As-is Project Type Modules

The following project types have not been validated for PAC Change Management 5.90, 6.50, 7.00, 7.50, 8.00, 8.50, 8.60, 9.00, and 9.50. They are available as is:

- **ABB Robots:** ABB Robot device programs and configuration data files, S4C plus robot controllers with Robotware 4.0 Rev 70.
Note: While only models listed above are fully tested and supported, this module should work with most ABB Robot hardware.
- **AutoCAD:** AutoCAD™ *.DWG files.
- **Fanuc CNC:** Fanuc CNC device programs and data files, PowerMate and CNC 16iM models only.

Notes:

- CNC 16iM models require CNC Executive version B0F2/23 and FWLib version 1.13.0.1.
- While only models listed above are fully tested and supported, this module should work with most Fanuc CNC hardware.
- **Modicon Concept:** Version 2.6
- **Modicon ProWORX:** Modicon ProWORXPLUS and Modicon ProWORX NxT projects, version 2.20 SP6.
- **Process Windows:** Version 2.x.
- **Siemens 840D CNC:** Siemens 840D CNC ARC files from the archiving system in the CNC PCU (PC Unit).
- **Siemens S5:** Version 7.2.
- **Wonderware:** Version 9.0.

General Contact Information

Home link: <http://www.emerson.com/industrial-automation-controls>

Knowledge Base: <https://www.emerson.com/industrial-automation-controls/support>

Technical Support

Americas

Phone: 1-888-565-4155
1-434-214-8532 (If toll free option is unavailable)

Customer Care (Quotes/Orders>Returns): customercare.mas@emerson.com

Technical Support: support.mas@emerson.com

Europe

Phone: +800-4444-8001
+420-225-379-328 (If toll free option is unavailable)

Customer Care (Quotes/Orders>Returns): customercare.emea.mas@emerson.com

Technical Support: support.mas.emea@emerson.com

Asia

Phone: +86-400-842-8599
+65-6955-9413 (All other Countries)

Customer Care (Quotes/Orders>Returns): customercare.cn.mas@emerson.com

Technical Support: support.mas.apac@emerson.com

Any escalation request should be sent to: mas.sfdcescalation@emerson.com

Note: If the product is purchased through an Authorized Channel Partner, please contact the seller directly for any support.

Emerson reserves the right to modify or improve the designs or specifications of the products mentioned in this manual at any time without notice. Emerson does not assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use and maintenance of any Emerson product remains solely with the purchaser.

© 2020 Emerson. All rights reserved.

Emerson Terms and Conditions of Sale are available upon request. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are the property of their respective owners.

