

# **ONE BUTTON ANALOG TALKING WATCHES**

## **With Date and Alarm Functions**

### **Models 101085, 101086**

#### **Setting Instructions**

Keys: TR = Top Right button (Near the "2")  
BR = Bottom Right button (Near the "4")  
(This Bottom Right button is recessed and can be accessed using a pen tip)

YOUR WATCH SHOULD ARRIVE WITH THE TALKING VOICE IN SLEEP MODE TO PRESERVE THE TALKING BATTERY LIFE. TO ACTIVATE THE TALKING FEATURES, PRESS AND HOLD THE TR BUTTON FOR 5 SECONDS UNTIL YOU HEAR A BEEP. THIS WILL TURN THE TALKING FEATURE ON. If you want to turn the talking features off altogether in the future, press and hold this TR button again for 5 seconds until you hear a beep.

#### **Setting Analog Time:**

- 1) Remove the protective plastic tab, by gently pulling out the stem.
- 2) With the stem pulled out, turn it to adjust the hour and minute hands to the desired time.
- 3) Lock in this time by pushing in the stem. The analog time will NOT advance if the stem is not pushed back in. DO NOT turn the stem unless it's pulled out, as this will damage the watch.

#### **Setting Talking Time:**

- 1) Using a pen tip, paperclip tip, or other small pointed object, press the recessed BR button to enter the Hour Set mode. You will hear "Set Hour."
- 2) Press the TR button the desired number of times to advance the hour.
- 3) To set the minutes, press the recessed BR button 2 times. You will hear "Set Minute."
- 4) Press the TR button the desired number of times to advance the minutes.

#### **Announcing the Current Time:**

- 1) Once the time is set, simply press the TR button and the current time will be announced.

#### **Setting Talking Date**

- 1) To set the year, press the recessed BR button 3 times. "Set Year" is announced.
- 2) Press the TR button repeatedly to advance to the correct year.

- 3) This talking watch supports years 2011-2059. If you go past the year you need, you must continue all the way through "59" before you can start back at "11."
- 4) To set the month, press the recessed BR button 4 times. "Set Month" is announced.
- 5) Press the TR button repeatedly to advance to the correct month.
- 6) To set the date, press the recessed BR button 5 times. "Set Date" is announced.
- 7) Press the TR button repeatedly to advance to the correct date.

### **Announcing the Current Date:**

- 1) Once the date is set, press the TR button 2 times. The watch will say "The date is Friday, 22 July." It will not state the year.

### **Setting Alarm Time:**

- 1) Press the recessed BR button 6 times. "Set Alarm Hour" is announced.
- 2) Press the TR button to adjust the alarm hour. AM and PM will be announced.
- 3) To set the alarm minutes, press the recessed BR button 7 times. "Set Alarm Minute" is announced.
- 4) Once done, do not press any buttons, waiting several seconds, until the watch "beeps." This indicates that the talking alarm time has been set.

### **Turning the Alarm On or Off**

- 1) Press the recessed BR button 8 times. "Set Alarm" is announced.
- 2) Press the TR button to turn the alarm on or press the TR button again to turn the alarm off. The watch will respond with "Alarm On" or "Alarm Off." It will also announce the alarm time.

### **Quick Guide to Bottom Right (BR) Commands**

- 1) 1 Time – Set Hour
- 2) 2 Times – Set Minutes
- 3) 3 Times – Set Year
- 4) 4 Times – Set Month
- 5) 5 Times – Set Date
- 6) 6 Times – Set Alarm Hour
- 7) 7 Times – Set Alarm Minutes
- 8) 8 Times – Turn Alarm On/Off

### **BATTERIES:**

- Only a professional jeweler should change these batteries. Jeweler tools and expertise are required to best service these watches and ensure batteries are correctly changed.
- These watches require two batteries:
  - CR2025 for the talking voice and SR626SW for the analog hands