

# USER MANUAL BW-0561-RD

Congratulations!  
Your TEK PARTNER™ Universal Remote Control is a state-of-the-art device that integrates many different infrared remote controls. (NOTE: The TEK PARTNER™ is not compatible with UHF (RF) controlled devices.)

The TEK PARTNER™ is pre-programmed at the factory, but you will need to enter a Device Code for each device to complete the program. Simply enter correct device codes for your equipment and your TEK PARTNER™ is ready to use! A Device Code List is included in this User's Manual.

The TEK PARTNER™ replaces up to 5 separate remote controls to operate your infrared controlled television (TV), video cassette recorder (VCR), cable box (CBL), digital video disc (DVD) or satellite receiver (SAT).

## SPECIFICATIONS

**Operating System:** Pre-programmed infrared remote control system.

**Compatibility:** Replaces most brands of infrared remote controls for TVs, VCRs, Cable, DVD systems and Satellite systems

**Power Requirement:** 4 AA size batteries, alkaline recommended.

**Size:** 5-1/2"W x 8-1/2"L x 2-1/2"H

## FEATURES

### **TV, VCR, CABLE, DVD and**

**SATELLITE.** Simply press the desired DEVICE MODE button (TV, VCR, CBL, DVD or SAT) once to select the operation MODE. **CODE NUMBER**

**ENTRY.** The ability to easily select the TV, VCR, CABLE, DVD or SATELLITE device you wish to control.

**CODE NUMBER RECALL.** The ability to display the code number of the currently selected TV, VCR, CBL, DVD or SAT device on the status indicator light. **POWER**

**SCAN.** The ability to search through the TV, VCR, CBL, DVD or SAT code library for a code that will operate the your device.

**POWER SCAN MODEL CHECK.** Expands the ability of regular Power Scan by allowing the user to remain in scan mode and test any valid button for the TV, VCR, CBL, DVD or SAT device being scanned.

**MASTER POWER.** The ability to turn on/off all TV, VCR, CBL, DVD or SAT devices at the same time upon press and release of the POWER button. This feature is user programmable to be enabled or disabled.

**VOLUME PUNCH -THROUGH.** You can control the volume of your TV when you are in another device mode. This feature is a user programmable selection

## TABLE OF CONTENTS

<b>Introduction</b>	1
<b>Feature List</b>	1
<b>Specifications</b>	1
<b>Setting up your TEK PARTNER™</b>	2
-Installing the Batteries	2
-Using Device Codes	2
-Using Power Scan (Searching)	3
-Using ID Recall	3
-Setting Punch-Through	3
-Enabling Master Power	4
<b>Operating TEK PARTNER™</b>	4
<b>Care &amp; Maintenance</b>	4
<b>Troubleshooting</b>	7
<b>Device Code Lists</b>	5-7
-TV	5
-VCR	5-6
-Cable	6-7
-Satellite	7
-DVD	7-8

## **INSTALLING THE BATTERIES**

Your TEK PARTNER™ requires 4 fresh AA-size batteries (alkaline batteries recommended).

1. Remove the battery cover on the back of your TEK PARTNER™.
2. Observe the polarity of the batteries and the “+/-” marks inside the battery compartment.
3. Insert the batteries.
4. Push the battery cover back in place.

NOTE: ■ When all batteries are disconnected, the TEK PARTNER™ retains it’s settings for a few hours. Should you fail to replace the batteries in time, you may have to re-program. Always write down your codes, just in case...

**There are 5 Device Modes (TV, VCR, CBL, DVD and SAT) in your TEK PARTNER™. You may setup the TEK PARTNER™ by using device codes or by using power scan (searching) instructions.**

*Important- If you are programming a TV/VCR Combo, try VCR codes first!*

## **USINGDEVICECODES**

At-A-Glance:

MODE (3 sec) → digit → digit → digit

(e.g. for a Zenith TV, press and hold “TV” button until LED starts blinking, **then** press and release “0”, “6”, “9”)

1. Manually turn on the device (e.g. your Television) you wish to control.
2. Referring to the DEVICE CODE LIST, look up the 3-digit Code Number that corresponds to the type and brand of your equipment. If there is more than one DEVICE CODE listed under your brand, try the first code with the following instructions:
3. Hold down the Device Mode Button (e.g. TV) on your Tek Partner until the status LED indicator (located under the "TV" button) begins to blink. (This takes about 3 seconds)
4. Enter the three digit code of the DEVICE from step “1” above. Upon entry of the third digit, the status indicator will blink a confirmation (3 blinks) if the code was accepted, but will turn OFF immediately if the code was rejected.
5. Press the “PWR” button. The device should turn off. Then try the other functions on the TEK PARTNER™. If your device responds to your requested function correctly, you have entered the correct Code. Otherwise, repeat the above setup instructions with the remaining Device Codes until your device (e.g. TV) responds to your requested function.

Simply repeat the above procedures to enter the Device Codes for your VCR, CBL, DVD or SAT - (Remember to press a correct Device Mode Button TV, VCR, CBL, DVD or SAT in step 2 above).

NOTES:

■ If you cannot find a correct Device Code for your equipment, see USING POWER SCAN (searching) section .

■ **It is highly recommended, for future reference, to write down your Device Codes on the bottom label of your TEK PARTNER™.**

## USING POWER SCAN (SEARCHING)

At-A-Glance:

MODE (3 sec) → POWER → Blue ARROW UP(▲) or Blue ARROW DOWN(▼) → ENTER

If you cannot identify a correct Device Code for your equipment from the Device Code List, you may try the **POWER SCAN** method.

1. Manually turn on the device you wish to scan for (e.g. TV)
2. Perform Power **Scan by pressing and holding (approximately 3 seconds)** the desired DEVICE MODE button TV, VCR, CBL, DVD or SAT until the status indicator light begins to blink.
3. **Press and release** the PWR (power) button. The status indicator light will stop blinking and stay ON at this point.
4. **Press and release** slowly and patiently the blue UP (▲) button to scan forward through the code database. To scan backward through the code database, press and release the blue DOWN (▼) button. Each time you press the up or down arrow, the remote will try and turn off the device (TV, VCR etc) you originally selected.
5. When the device (TV, VCR etc.) responds by shutting off, press the ENTER button. This will store the code in memory and you will see three blinks of the status indicator light to confirm the code input. **Be patient, there are over 100 codes to search through.**

### **NOTE:**

■ Power Scan Model Check is the same as Power Scan, however, other keys may be tested to see if they work with the target device without leaving the scan feature. If the device responds to the other keys pressed, then the current ID will be locked in by pressing the ENTER button. Otherwise, scanning may be continued by pressing either the blue ARROW UP (▲) or blue ARROW DOWN(▼) buttons.

At-A-Glance:

MODE (3 sec) → POWER → ARROW UP(▲) or ARROW DOWN(▼) → ANY VALID KEY or (ARROW UP (▲) or ARROW DOWN (▼) ENTER

## USING ID RECALL

At-A-Glance:

MODE (3 sec) → PREV CH

1. To see the Code of a device, press and hold the DEVICE MODE button (TV, VCR, CBL, DVD or SAT) of the selected device until the status indicator begins to blink (approx. 3 seconds).
2. Press the PREV CH button. Upon release of the PREV CH button, the status indicator will blink the 100's, 10's and 1's of the device's code.
3. Count the number of blinks to determine the code. A '0' in any location is represented by a fast flicker of the status indicator. An code of 102 will be shown as BLINK <pause> FLICKER <pause> BLINK, BLINK .

## SETTING PUNCH-THROUGH

At-A-Glance:

CBL or SAT MODE (3 sec) → CBL or SAT (hold) → TV

NOTE: By setting punch-through in CBL or SAT Mode, the TV's volume up/down controls will be accessed by the TEK PARTNER™ when in the CBL or SAT Mode.

1. Press and hold the CBL or SAT MODE button until the status indicator begins to blink (approx. 3 sec.). Release the Device Mode button.
2. Press and hold the DEVICE button (CBL or SAT) and press the TV button. The status indicator will blink a confirmation sequence of 2 blinks.

### **ENABLING MASTER POWER**

At-A-Glance:

ANY DEVICE MODE (3 sec) → POWER → POWER

1. The Master Power feature is disabled as the default. To enable Master Power, press and hold any DEVICE MODE button TV, VCR, CBL, DVD or SAT until the status indicator begins to blink (approx. 3 sec.).
2. Press and release the PWR (power) button twice. The status indicator will blink a confirmation (2 blinks) that Master Power has been enabled.
3. Repeat the process to disable the Master Power feature.

NOTE:

■ With Master Power enabled, the remote will send the power code plus 2 additional power codes for each TV, VCR, CBL, DVD or SAT, in that order. All of the devices should be within the remote's operating range so they can receive their power code.

### **OPERATING THE TEK PARTNER™**

Normal Operation Once you have set up the TEK PARTNER™ for your equipment, it works like your original remote controls. To operate, just aim it at your equipment, press an appropriate Device Mode Button and then command the desired function by pressing a corresponding button on the TEK PARTNER™. The indicator turns on during signal transmission and as confirmation of button touch. At your button touch, the TEK PARTNER™ illuminates the keypad for 5 seconds. You will see the keypad clearly even when you are in a dimly lit area.

### **CARE & MAINTENANCE**

1. Do not expose your TEK PARTNER™ to direct sunlight, high temperature, mechanical shock, or liquids.
2. Do not use old and new batteries together as old batteries tend to leak.
3. Do not use corrosive or abrasive cleansers on your TEK PARTNER™.
4. Keep the unit dust free by wiping it with a soft, dry cloth.
5. Do not disassemble your TEK PARTNER™, it contains no user-serviceable parts.

**TV CODES**

AIWA 126  
 ADMIRAL 069 192  
 ADVENT 241  
 AKAI 001 160  
 AMPRO 070  
 ANAM 045 055 057 076 095 106  
 109 112  
 AOC 001  
 APEX 216  
 BELL&HOWELL 069  
 BROKSONIC 091 255  
 CANDLE 001 002 003  
 CENTURION 038 170  
 CETRONIC 045  
 CITIZEN 001 002 003 045 092  
 CLASSIC 045  
 CONTEC 045 052  
 CORANDO 172  
 CRAIG 045 049 055 157  
 CROWN 045  
 CURTIS MATHES 001 092  
 CXC 045  
 DAEWOO 022 023 045 046 056  
 068 102 108 111 114 116 118  
 119 127  
 DYNASTY 045  
 DYNATECH 063  
 ELECTROHOME 167  
 EMERSON 001 029 033 045  
 048 049 052 091 139 141 157  
 162 214  
 ENVISION 001  
 FISHER 058  
 FUNAI 033 045  
 FUTURETECH 045  
 GATEWAY 017  
 GE 001 015 057 070 071 121  
 133 141 145 163 199  
 GOLDSTAR (LG) 101 104 110  
 113 118  
 GRADIENTE 238  
 HARMAN KARDON 201  
 HITACHI 001 015 016 018 029  
 043 072 147 204 207 226  
 INFINITY 247  
 INKEL 120  
 JBL 247  
 JCPENNY 001 015 035 092 145  
 JENSEN 019  
 JVC 040 079 251  
 KAWASHO 173

**TV CODES cont'd**

KEC 045  
 KENWOOD 001  
 KLOSS 002 060  
 KTV 001 045 162 248  
 LLOYTRON 172 173  
 LODGENET 069  
 LOEWE 247  
 LOGIK 069  
 LXI 145 247  
 MAGNAVOX 001 003 005 010  
 030 041 059 060 061 064 065  
 118 145 210 225 247  
 MAJESTIC 069  
 MARANTZ 001 167 247  
 MEMOREX 053 069  
 MGA 001 033 044 167  
 MIDLAND 199  
 MITSUBISHI 001 011 033 039  
 042 044 100 154 160 167 168  
 MOTOROLA 237  
 MTC 001  
 NAD 031  
 NATIONAL 177 178 179 180  
 181 182  
 NEC 001 022 025 042 057 121  
 125  
 NIKEI 045  
 ONKING 045  
 ONWA 045  
 OPTIMUS 031  
 OPTONICA 025  
 ORION 091  
 PANASONIC 008 057 076 087  
 149 247 248 249 250 252  
 PENNEY 199  
 PHILCO 001 003 045 057 060  
 061 064 065 118  
 PHILIPS 001 003 040 060 088  
 145 231 232 233 234 235 236  
 247  
 PIONEER 001 024 029 031  
 032  
 PROSCAN 133  
 QUASAR 034 057 087 227 232  
 248  
 RADIO SHACK 025 045 048  
 118 163 196 198  
 RCA 001 007 029 057 071 133  
 145 155 161 163 199 205 206  
 222

**TV CODES cont'd**

REALISTIC 025 045 048 163  
 196  
 SAA 183  
 SAMPO 001  
 SAMSUNG 001 085 092 096  
 104 118 124 145 156  
 SANSUI 091  
 SANYO 026 037 038 041 054  
 058 078  
 SCOTT 033 045 049  
 SEARS 033 035 058 078 092  
 145  
 SHARP 025 028 033 154 253  
 SIGNATURE 069  
 SONY 004 012 043 117 194  
 230 245  
 SOUNDESIGN 003 033 045  
 SSS 045  
 SUPREMACY 002  
 SYLVANIA 001 003 009 027  
 060 061 064 065 118 145 150  
 240 247 254  
 SYMPHONIC 184  
 TATUNG 057 063  
 TECHNICS 080  
 TEKNIKA 001 002 003 033 036  
 045 069 092 167  
 TELEFUNKEN 047  
 TELERENT 069  
 THOMSON 190 191  
 TOSHIBA 013 035 042 052 063  
 092 202 246  
 UNIVERSAL 015  
 VIDEO CONCEPTS 160  
 WARDS 015 025 033 061 064  
 065 069 071 247  
 YAMAHA 001  
 YUPITERU 045  
 ZENITH 069 070 090

**VCR CODES**

AIWA 040  
 AKAI 048 050 109  
 AMPRO 076  
 AMSTRAD 133  
 ANAM 037 039 089  
 ASA 134  
 AUDIO DYNAMICS 018 029  
 044 048

**VCR CODES cont'd**

BROKSONIC 005 041 043 110  
166  
CANDLE 134  
CANON 034 037 039 140  
CAPEHART 094  
CITIZEN 134  
CRAIG 003 116  
CURTIS MATHES 037 039  
DAEWOO 012 014 094 096  
098 102  
DAYTRON 094  
DBX 018 029 044 048  
DUAL 136  
DYNATECH 040 057 179  
ELECTROHOME 063  
EMERSON 033 037 040 041  
042 043 050 110 112 171 182  
183 184 186 191 193 195  
FERGUSON 136  
FISHER 003 016 142  
FINLUX 133  
FUNAI 040 133  
GE 037 039 067 076 093 095  
124 127  
GO VIDEO 113 117  
GOLDSTAR(LG) 011 018 026  
092 100 107  
GRAETZ 136  
HARMAN KARDON 018 049  
HITACHI 011 040 048 067 118  
INSTANTREPLAY 037 039  
ITT 136  
JCL 037 039  
JCPENNY 011 018 039  
JENSEN 048  
JVC 018 037 039 048 052 054  
059 111 132  
KENWOOD 020 044 048 052  
LLOYD 040  
LXI 011 020 040  
MAGNAVOX 037 039 040 071  
072  
MARANTZ 018 037 039 071  
073  
MATSUI 033 036  
MEI 037 039  
MEMOREX 003 008 009 010  
020 037 039 040 057 076 115  
MGA 049 050 063  
MINOLTA 011 026

**VCR CODES cont'd**

MITSUBISHI 011 026 032 049  
050 053 055 063 065 131 145  
146  
MOTOROLA 196 197  
MTC 133  
MULTITECH 030 040  
NAD 139  
NATIONAL 140  
NEC 018 029 044 048 052  
NORDMENDE 048  
OPTIMUS 057  
OPTONICA 057 058  
ORION 005 166  
PANASONIC 017 024 037 078  
150 167 173 176 188 189 201  
203 206 209  
PENTAX 011 026 037 039 067  
PHILCO 037 039 040 071  
PHILIPS 037 039 040 058 071  
075  
PIONEER 011 018 027 052  
PORTLAND 094  
PROSCAN 121  
PULSAR 076  
QUARTZ 002 020  
QUASAR 039 079 167  
RADIO SHACK 003 007 020  
057 093 133 134 137 140 142  
152 153 158 160 161 167  
RCA 006 011 026 039 066 067  
093 095 124 127 157  
REALISTIC 003 020 037 039  
040 057 058 093 142 152 160  
SABA 136  
SALORA 020  
SAMSUNG 004 038 090 091  
093 095 098 106 109 207  
SANSUI 005 048 052 116 166  
SANYO 003 014 020 115  
SCHAUB LORENZ 136  
SCOTT 043 098 110 112  
SEARS 003 011 016 020 026  
037 047 142  
SHARP 037 058 156 196 205  
SHINTOM 030  
SONY 003 016 037 056 060  
061 082 187 196 199 202  
SOUNDESIGN 040  
STS 011  
SYLVANIA 001 037 039 040  
063 071 200 208

**VCR CODES cont'd**

SYMPHONIC 040  
TANDY 040  
TASHICO 134  
TATUNG 044 048  
TEAC 040 044 048  
TECHNICS 037 039  
TEKNIKA 025 037 039 040  
TELEFUNKEN 136  
THOMAS 040  
THOMSON 136  
THORN 136  
TOSHIBA 004 011 013 047 051  
063 085 098 112 142 174 185  
193 195 198  
VECTOR RESEARCH 018  
VICTOR 052  
VIDEO CONCEPTS 018 040  
050  
WARDS 003 011 030 037 039  
040 057 058 112  
YAMAHA 018 040 044 048  
ZENITH 005 040 052 060 076  
083

**CABLEBOX CODES**

ABC 001 003 045 048 052 059  
130  
ALLEGRO 111  
AMERICAST 212  
ANTRONIX 021  
ARCHER 012 014 021 031 112  
BELCOR 113  
CABLE STAR 033 113  
CENTURION 092  
CENTURY 014  
CITIZEN 014 111  
COLOUR VOICE 090  
COMTRONICS 037  
CONTEC 228  
DIAMOND 030  
DIGI 114  
EAGLE 027 037 046 186  
EASTERN 063 066 070 115  
ELECTRICORD 039  
EMERSON 112  
GI 001 003 015 017 096 097  
141  
GC ELETRONICS 113  
GE 076  
GEMINI 015  
GENERAL 210

**CABLEBOX CODES cont'd**

GENERAL INSTRUMENT 226  
227  
GOLD STAR(LG) 224  
GOLDEN CHANNEL 037  
GOODMIND 112  
HAMLIN 055 056 061 099 100  
101 117 152 175 207 208  
HITACHI 001 061  
HOSPITALITY 074 080  
JASCO 111  
JERROLD 001 002 003 015  
016 017 073 096 097 140 141  
162 166 167 210  
MACOM 040 191  
MAGNAVOX 017 019 068 082  
MEMOREX 058  
MOTOROLA 215 216  
MOVIE TIME 039  
NSC 044 075 190  
OAK 023 059 196 197 223  
PANASONIC 050 053 155 176  
177 189 214 225  
PANTHER 114  
PARAGON 058  
PHILIPS 013 019 020 027 085  
090  
PIONEER 001 041 057 119  
147 148 171 209 217 219 224  
POST NEWS WEEK 023  
PRIMESTAR 162  
PTS 018 054 075 076  
PULSAR 058  
QUASAR 058  
RADIOHACK 111 112 213  
RCA 053 214  
REALISTIC 012  
REGAL 055 056 061 099 100  
101 158 207  
REGENCY 063 115  
RUNCO 058  
SAMSUNG 037 072 186 224  
SCIENTIFIC ATLANTA 003  
018 047 048 052 130 145 159  
160 183 203 204  
SIGNAL 037  
SIGNATURE 001  
SL MARX 037  
SONY 098 229 231  
SPRUCER 053 081 177 189  
STARCOM 002 015 016 141  
163

**CABLEBOX CODES cont'd**

STARGATE 015 037  
SYLVANIA 071  
TADIRAN 037  
TANDY 024  
TELECAPATION 028  
TEXSCAN 036 071  
TIMELESS 123  
TOCOM 045 046 062 170 205  
220  
TOSHIBA 058  
UNIKA 014 021 031  
UNITED CABLE 059  
UNIVERSAL 012 014 021 031  
033 034 039 042 113  
VIDEOWAY 124  
VIEWSTAR 019 025 190  
ZENITH 058 065 098 212 222

**SATELLITES CODES**

ALPHASTAR DSR 422  
CHANNEL MASTER 317 320  
321 361  
CHAPARRAL 315 316 451  
DIRECT TV 312  
DRAKE 317 318 326 413  
DX ANTENNA 331 352 369  
EHOSTAL 475  
EHOSTAR 309 319 322 380  
395 396 463 467 475 477 483  
484 490 493  
ELECTRO HOME 392  
FUJITSU 334  
GENERAL ELECTRIC 474  
GENERAL INSTRUMENT 301  
303 311 323 365 403 454 468  
HITACHI 372  
HITACHI DBS 455  
HOUSTON TRACKER 463 467  
HUGHES 306 314 455 480  
485 488  
JANIEL 366  
JERROLD 367 454 464 468  
JERROLD PRIMESTAR 456  
LEGEND 453  
MACOM 317 365 370 371  
MAGNAVOX 473  
MEMOREX 453  
MITUBISHI 372  
NEXTWAVE 423  
NORSAT 373 374  
OPTIMUS 466

**SAT CODES cont'd**

PANASONIC 366 469  
PANASONIC DBS 457  
PHILIPS 305 375 480 485 487  
488 492 494  
PAC DSS 478  
PRESIDENT 381 404  
PRIMESTAR 412 454 464  
RCA 307 308 310 465 474 481  
482 491  
RCA DSS 458 476  
REALISTIC 325 349 377  
SAMSUNG 313 422 489  
SATELLITE SERVICE CO 331  
335 341 353  
SCIENTIFIC ATLANTA 339  
SONY 304 405 486  
STAR CHOICE DBS 459  
SUPER GUIDE 327 423  
TEECOM 330 333 390 391 409  
TOSHIBA 302 426 462 470 473  
UNIDEN 323 324 325 326 332  
348 349 350 351 354 355 381  
382 383 389 403 466  
ZENITH 371 384 387 394 419  
479

**DVD CODES**

APEX DIGITAL 216 233 239  
CALIFORNIA AUDIO 176  
CYBERHOME 001  
DAEWOO 246  
DENON 150 162 179 201 208  
DVD-VIDEO 231  
EMERSON 007  
GE 196 197  
GO VIDEO 002  
GOLD STAR(LG) 198 211 219  
226  
GRADIENTE 228 229  
HITACHI 193  
HARMAN KARDON 148 149  
186 220  
JVC 192 199  
KENWOOD 151 183 225  
KLH 224  
LOTTE 152  
MAGNAVOX 169 212 234  
MARANTZ 169 214  
MITSUBISHI 172 202  
NAD 217  
ONKYO 200 207

## **DVD CODES cont'd**

OPTIMUS 153 183  
PANASONIC 163 171 179 181  
184 189 203 205 238 240 343  
PHILIPS 005 169 188 212  
PIONEER 154 160 174 180  
221 222  
PROSCAN 173 196 197  
PROCEED 215  
RCA 159 173 196 197  
RUNCO 165  
SAMSUNG 002 003 168 195  
209 210 241 244 245  
SANYO 044 155 156 182  
SHARP 161 166 183 204 230  
SONY 156 167 178 187 191  
206 223 232 242  
SYLVANIA 006 235  
TECHNICS 164  
THOMPSON 196 197  
TOSHIBA 169 181 185 190  
200 213 227 236  
YAMAHA 157 158 205 218  
ZENITH 169 194 198 211 219  
ZENITH DIVX 175

*END OF CODE LISTING*

## **TROUBLESHOOTING**

**Q.** My TEK PARTNER™ does not work at all!

**A.** Check whether batteries are in good condition inserted properly and are in correct +/- polarity. See **INSTALLING THE BATTERIES**.

**A.** Make sure you have pressed the Device Mode Button TV VCR CBL or SAT before using any functions.

**Q.** If several Device Codes are listed for my device how can I select the correct Device Code?

**A.** To seek the Device Code for your device test the codes one by one until the device works properly.

**\*\* NOTE: In order to include codes for many cable/satellite systems, certain buttons on your TEK PARTNER™, in CBL or SAT modes, will activate different functions than shown on the buttons. For a description of those button functions, refer to the **BUTTON FUNCTION TABLE:****

## **BUTTON FUNCTION (CBL/SAT)**

<b><u>BUTTON</u></b>	<b><u>FUNCTION**</u></b>
PWR	POWER OFF/ON
VOL+/-	VOLUME +/-
CH+/-	CHANNEL +/-
MUTE	INFO/VIEW**
PREV CH	LAST CHAN/RECALL**
ENTER	ENTER/SELECT**
MENU	MENU
PLAY	ARROW UP ( ▲ )
STOP	EXIT**
PAUSE	GUIDE**
REW	ARROW LEFT ( ◀ )
FF	ARROW DOWN ( ▼ )
REC	ARROW RIGHT ( ▶ )
TV/VCR	TV /VCR / SAT) MODES**
CBL	CABLE MODE
SAT	SATELLITE MODE
O - 9	O - 9

**Q.** My equipment responds only to some of the commands.

**A.** You have set a code for which only some commands work properly but some do not. Try other codes until the buttons work properly. Make sure you have tried setup using **DEVICE CODES** and **POWER SCAN** (searching) instructions.

**Q.** My TEK PARTNER™ doesn't control the Volume on my TV from CBL/SAT modes.

**A.** You need to set the **VOLUME PUNCH THROUGH**. See **SETTING PUNCH-THROUGH** section of this manual.

**PART NUMBER: BW-0561-RD  
JUNE / 05**

**For Additional Information  
Please**

**Visit Our Website at:**

**<http://www.hytekmfg.com>  
HY-TEK MFG. CO. INC.  
1998 BUCKTAIL LANE  
SUGAR GROVE, IL 60554  
630-466-7664**